

Philips Shaver series 5000
Wet & Dry electric shaver

SteelPrecision blades

Power Adapt sensor
360-D Flexing heads
Integrated pop-up trimmer

S5587/10



Powerful shave, gentle on skin

with SkinIQ Technology

The Philips Series 5000 delivers a powerful shave, cutting now even more hair per stroke*. Equipped with advanced SkinIQ technology, the shaver senses and adapts to your hair density, for improved skin comfort.

A powerful shave

- More cutting performance in every stroke
- Follows the contours of your face
- Guides hair into the optimal cutting position

SkinIQ technology

- A shaver with the power to tame beards

For a convenient shave

- One-touch open for easy cleaning
- Choose a convenient dry or refreshing wet shave
- Even-up your mustache and sideburns
- 60 minutes of shaving from a 1-hour charge
- A more intuitive shaving experience
- Fully charged in one hour

Sustainability

- The electric shaver with an Eco passport

PHILIPS

Highlights

SteelPrecision blades



Powerful yet gentle, the 45 self-sharpening SteelPrecision blades on this Philips shaver complete up to 90,000 cutting actions per minute, cutting more hair per stroke** for a clean, comfortable finish.

Power Adapt sensor



The electric shaver has intelligent facial-hair sensor that reads hair density 125 times per second. The technology auto-adapts cutting power for an effortless and gentle shave.


360-D Flexing heads



Designed to follow the contours of your face, this Philips electric shaver has fully flexible

heads that turn 360° for a thorough and comfortable shave.

Hair-Guide precision heads

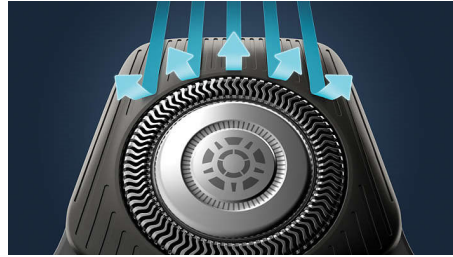

This new shape precision shaver is enhanced with hair guiding channels for optimal cutting and skin comfort.

One-touch open



Clean your electric shaver with the touch of a button. Simply flip open the shaver head and rinse with water.

Shave wet or dry



A wet and dry shaver that adapts to your preference. Choose a convenient dry shave, or

pair with your favourite foam or gel for a refreshing wet shave.

Pop-up trimmer



Refine and define your mustache and sideburns with the pop-up trimmer—and complete your look with ease.

60 minutes of cordless shaving



A shaver for at home or on-the-go. Get 60 minutes of shaving time from a 1-hour charge, or plug it in for instant and continuous power.

1-hour charging time



Fully charge your Philips shaver in just 1 hour with the powerful and energy efficient lithium-ion battery. In a hurry? Plug in your shaver for 5 minutes and get enough power for 1 full shave.

Specifications

Accessories

- Maintenance: Cleaning brush, Protective cap
- Integrated pop-up trimmer
- Travel and storage: Protective cap, Soft pouch, Travel case

Power

- Battery type: Li-ion
- Run time: 60 minutes
- Charging: 1 hour full charge, 5 min quick charge
- Automatic voltage: 100-240 V
- Stand-by power: 0.04 W
- Max power consumption: 9 W

Design

- Handle: Rubber grip
- Color(s): Carbon Grey
- Shaving heads: Angular

Service

- 2-year warranty
- Replacement head SH71: Replace every 2 yrs with SH71

Shaving Performance

- Contour following: 360-D Flexing heads
- Shaving system: SteelPrecision blades
- SkinIQ technology: Power Adapt sensor

Ease of use

- Display: Battery level indicator, Travel lock, LED display
- Wet & Dry: Wet and dry use
- Cleaning: One-touch open, Fully washable

SmartClick attachment

- Fits product type: RQ585/51 DOES NOT fit angular head type



Issue date 2023-08-17

Version: 9.9.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Tested versus Philips Series 3000.