

# PHILIPS

With tilting  
StyleBoard

Stand Steamer  
3000 Series

Tilting StyleBoard

3 Steam settings

Pointed metal steam plate tip

2000W power

STE3170/80



## Easy, every day de-creasing

### Tilting StyleBoard for better results

Spend less time de-creasing your outfits with the Philips Stand Steamer 3000 Series thanks to its integrated board and large pointed steamer. Keep your wardrobe germ free\* and add scented freshness with the MyEssence fragrance infuser.

#### Convenient and effective

- Tilting StyleBoard for better results, conveniently
- 3 steam settings with high continuous steam rate
- Large 2 L water tank, lasts longer between refills
- Slim design to store easily

#### Quick crease removal


- Heats up in under 60 seconds, so you are ready in no time
- Large pointed metal steamer head for precise results
- Safe on all ironable fabrics

#### Refresh without washing or dry cleaning

- MyEssence, refresh your clothes with your favorite scents
- Kills up to 99.9% of bacteria\* to refresh and remove odors

# Highlights

## Tilting StyleBoard

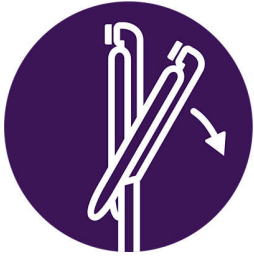

The tilting StyleBoard provides reliable support during steaming. Simply press the fabric between the steam plate and board for easier steaming with crisp results from top to bottom.

## Short heat up time



Whenever you need it, the stand steamer is ready to use in less than 60 seconds, ideal for those last minute outfit choices.

## MyEssence



Our innovative MyEssence fragrance infuser lets you refresh clothing with your favourite scents anytime you choose.

## 3 Steam settings




Set your preferred steam setting for optimal results on different fabric. Use low steam for thinner fabrics and a more powerful setting for thicker fabrics and coats.

## Large steamer head



Perfectly precise: Our innovative metal steamer head features a large soleplate and precision tip designed to tackle hard-to-reach areas like collars and in-between buttons with ease.

## Kills 99.9% of bacteria\*

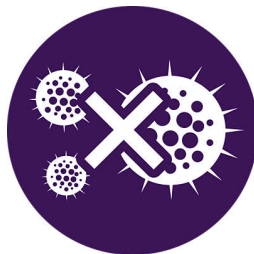

Besides de-wrinkling, 3000 Series also refreshes clothes (and soft furnishings, curtains, toys) and removes odors by killing up to 99.9% of bacteria\*.

## Large water tank




Take on big loads: The 2L detachable and transparent water tank is large enough to tackle even big loads of ironing.

## Safe on all ironable fabrics



Our steamer is safe to use on all ironable fabrics and garments. Our steam plate can be safely pressed against any clothing with no risk of burning; a great solution for delicate fabrics like silk.

## Easy storage

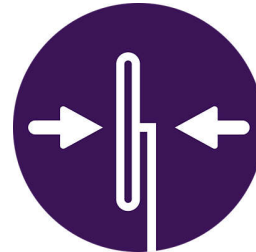

Make it fit: Due to its smart design, the stand steamer doesn't take much space and can be stored easily.

# Specifications

## Board cover

Top layer: 100% Cotton

## Calc management

Suitable for tap water

## Support for ironing

StyleBoard

## Accessories

Easy steamer head holder

Glove for extra protection

Adjustable pole

Brush

Adjustable double pole

Support accessory: Tilting StyleBoard

MyEssence fragrance cap

## Design

Color: Black

## Easy to use

Water tank capacity: 2000 ml

Safe on all ironable fabrics: Even delicates like silk

Filling and emptying water: Large filling hole

Heat up time: <1 minute(s)

Soleplate name: Metal

Detachable water tank

Power cord length: 1.8 m

Hose length: 1.33 m

Integrated power plug

Silicone steam hose

Special water inlet

Auto shut off

PVC Free Hose

## Guarantee

2 year worldwide guarantee

## Fast & powerful crease removal

Continuous steam output: 40 g/min

Power: 2000 W

Steam output

Steam output control: 3 settings

Vertical steam

Voltage: 220-240 V

Ready to use: <1 minute(s)

Variable steam levels

Variable steam: 3 levels

Steam-on-demand

## Green efficiency

Product packaging: 100% recyclable

User manual: 83% recycled paper

## Scale management

Descaling and cleaning: Easy Rinse

## Size and weight

Board size (WxHxL): 32\*5\*60 cm

Product dimensions (WxHxL): 32\*172\*31 cm

Cover size (WxHxL): 33\*5\*61 cm

Weight of board: 0.6781 kg

Total weight with packaging: 2.33 kg

Foam layer thickness: 5 mm

Ironing surface: 60 cm

Pole dimensions extended: 101 cm

Weight of steamer head: 0.43 kg

Weight of steamer head + base: 4.23 kg

