



Philips PerfectCare Azur  
Steam iron

Steam 45g/min; 180g steam boost

SteamGlide Plus soleplate  
Safety Auto off + Anti-calc  
Safe for all ironable garments



GC4910/10

## Carefree ironing, no setting required

### Ironing perfected

Iron any ironable garment from silk, to linen, to cotton, to cashmere, in any order, without adjusting the temperature. PerfectCare Azur delivers perfect results without the risk of burn or shine. Ironing is now simpler than ever.

#### Fast and powerful ironing

- 2400 W iron for fast heat up and powerful performance
- Steam output of up to 45 g/min for better crease removal

#### Fast and powerful ironing

- Steam boost up to 180 g

#### Comfortable ironing

- Iron with smart light feedback indicator
- Suitable for tap water with Double Active Calc Clean system
- Iron switches off automatically when left unattended
- SteamGlide Plus: perfect mix of gliding and stretching
- Quattro Precision Tip for easy reach in tricky areas

#### One perfect setting for all your clothes

- 100% safe on all ironable garments

# PHILIPS

## Steam iron

Steam 45g/min; 180g steam boost SteamGlide Plus soleplate, Safety Auto off + Anti-calc, Safe for all ironable garments

# Highlights

### OptimalTemp technology



The latest revolution in ironing to deliver the perfect combination of steam and temperature. It's made to ensure you get speedy ironing and great results on tough creases, with no setting required, and is safe on all ironable fabrics. The perfect combination of steam and temperature because: 1) the Smart Control Processor sets the right temperature 2) the HeatFlow technology enables an even steam and temperature balance.

### 100% safe



100% safe on all fabrics even the most delicate like silk, cashmere, wool, polyester. Independent iron testing institutes have used PerfectCare on the most sensitive ironable garments and they confirmed excellent ironing results.

### 100% fast

100% fast to iron, no sorting required. Iron all your garments with more effective steam.

### 100% easy to use



100% easy to use, no adjustment required. You can now iron all ironable garments one after the other, without having to wait or to adjust the iron's temperature dial.

### SteamGlide Plus soleplate



For the best results you need a soleplate that has the optimal balance between gliding and stretching. This is offered through SteamGlide Plus with its easy glide zone and perfect stretch zone.

### Suitable for tap water




PerfectCare Azur steam iron is designed to be used with tap water. Double Active Calc

GC4910/10

Clean: A smart combination of Calc Pills and a regular Self Clean reduce the scale built-up. For better ironing results we recommend to use demineralised water. This ensures a consistent steam flow from your iron.

### Safety auto off

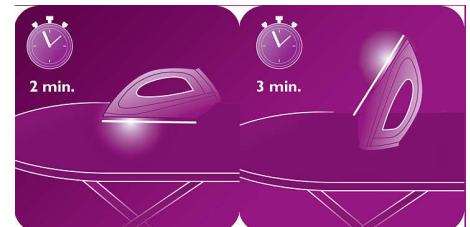

The iron shuts off automatically when left unattended. If left on its heelrest the steam iron will switch off in 3 minutes, when left resting on the soleplate it will take 2 minutes before the iron shuts off.

### Quattro Precision Tip



The Quattro Precision Tip of the steam iron allows you to reach into the most difficult to reach areas while ironing. Iron closely around the buttons with the button groove; having a speedy designed shape for better visibility; a Precision SteamBoost area for a focused shot of steam and the slim tip for delicate ironing complete the Quattro Precision Tip.

## Steam iron

Steam 45g/min; 180g steam boost SteamGlide Plus soleplate, Safety Auto off + Anti-calc, Safe for all ironable garments

GC4910/10

# Specifications

### Easy to use

- Water tank capacity: 350 ml
- Soleplate name: SteamGlide Plus
- Safety auto off
- Drip-stop
- Cord freedom (swivel): 180 degree cord freedom
- Tap water suitable
- Power cord length: 2.5 m

### Technology

- OptimalTEMP technology

### Fast crease removal

- Power: 2400 W
- Steam boost: 180 g
- Continuous steam: Up to 45 g/min

- Vertical steam
- Water spray

### Scale management

- Descaling and cleaning: Double active calc clean

### Storage

- Cord storage: Cord clip

### Size and weight

- Weight of iron: 1.79 kg

### Green efficiency

- Energy saving mode
- Energy saving\*: 10 %



Issue date 2022-06-21

Version: 1.0.2

EAN: 08 71010 36515 50

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)