



Philips 6400 series
Pressurised ironing system

90 gr

GC6420

Double your ironing speed with pressurised steam

Compact powerful ironing system

Have all the convenience of a compact sized system iron and double your ironing speed with pressurised steam.

Fast and powerful ironing

- Up to 4 bars of steam pressure for fast ironing
- Continuous steam up to 90 g/min

Easy to use

- Easy set-up and storage

Comfortable ironing

- Ergonomic and lightweight 1.2 kg iron
- Smooth-gliding, durable stainless-steel soleplate

Reaches into tricky areas

- Steam tip allows you to have steam in hard-to-reach areas

PHILIPS

Highlights

Up to 4 bars steam pressure




Double your ironing speed with pressurised steam. Pressurised steam penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

Continuous steam

The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

Ergonomic iron

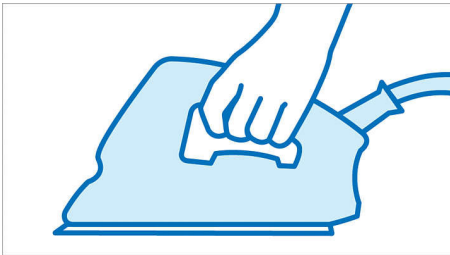


The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upwardly sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2 kg) for an easy and comfortable ironing experience.

Easy set-up and storage




Easy set-up and storage

Stainless-steel soleplate

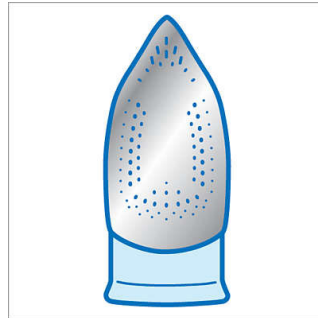

Smooth-gliding, durable stainless-steel soleplate

Steam tip

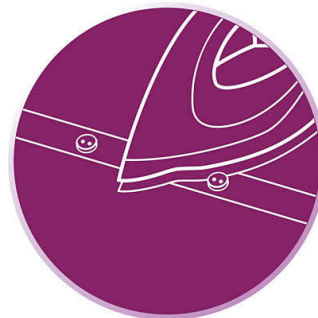

The unique steam tip of this Philips iron combines a particularly pointed front of the soleplate with special elongated steam slots in the tip to reach right into the smallest and most difficult areas for the best ironing results.

Specifications

Technical specifications

- Frequency: 50–60
- Voltage: 220 - 240
- Boiler wattage: 1370
- Iron wattage: 800
- Start-up time: 6

Weight and dimensions

- Product weight: 5.25
- Product dimensions: 319 x 199 x 166

Easy to use

- Control: Temperature ready light
- Reaching tricky areas: Button groove, Steam tip
- Easy to set up and store: Compact design, Easy cord and hose storage

Smooth gliding

- Soleplate: Non-stick soleplate

Comfortable ironing

- Cord length: 1,9 m
- Anti-scale management: Easy Rinse
- Ergonomic iron design: Ergonomically designed iron for comfortable ironing
- Hose length: 1.7 m
- Safe in use: Overheat safety stop
- Suitable for tap water
- Water tank capacity: 800 ml

Crease removal

- Vertical Steam: Continuous vertical steam
- Continuous steam: Up to 90 gr/min
- Soleplate: Optimal vent pattern
- Pressurised Steam: Up to 4 Bar

