

Philips Marathon  
Bagless vacuum cleaner

AutoClean  
PerfectCare

FC9236/01



## Performs better for longer

Self-cleaning filter, no bag required

Unique AutoClean function to clean your bagless filter easily and maintain optimal suction power

### Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

### Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

### Right tool for each type of floor

- Super Parquet nozzle and Turbo Brush nozzle

### Optimal cleaning power every time

- AutoClean filter optimises suction power


### Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

# PHILIPS


# Highlights

## 2000 Watt motor

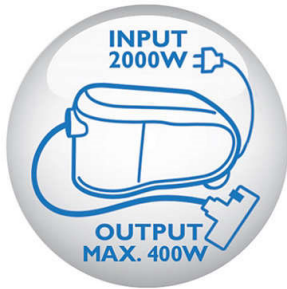

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

## AutoClean filter

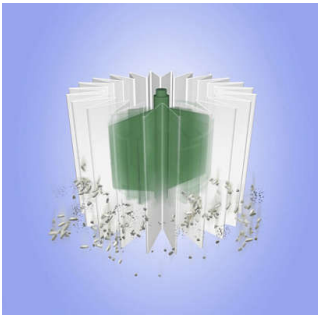

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

## HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through



Issue date 2023-04-14

Version: 1.0.1

the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

## Super Parquet and Turbo Brush



The two additional nozzles enable you to vacuum clean all types of floors with the right tool. The Super Parquet nozzle delicately removes 3 x more sticky dirt from your hard floors. The Turbo Brush nozzle allows deep cleaning and quick hair and fluff removal from carpets. This results in 25% better cleaning performance on carpet floors.

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 78 dB
- Airflow (max): 37 l/s
- Suction power (max): 400 W
- Vacuum (max): 33 kPa
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s
- Input power (max): 2000 W
- Suction power (max): 400 W

## Design

- Colour: Emperor red

## Usability

- Tube coupling: Button
- Action radius: 12 m
- Action radius: 12 m
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Cord length: 9 m
- Power control: Electronic on appliance
- Wheel type: Rubber

## Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle, Turbo brush

## Weight and dimensions

- Weight of product: 7.5 kg

## Filtration

- Dust capacity: 1.5 L
- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- Filter type: HEPA

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)