




Philips PowerPro Aqua
2-in-1 Wet and Dry
Cordless Vacuum Cleaner
and Mop

Filters 90% bacteria and allergens
Mop and vacuum at the same time
Lightweight, 40min run time
PowerCyclone technology

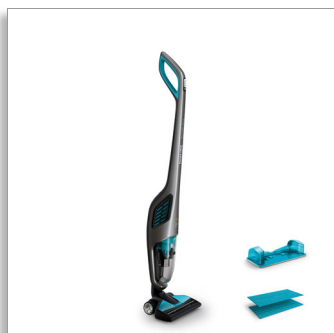

FC6402/61

Vacuums and mops in one stroke

Always at hand to quickly clean daily messes

The new Philips PowerPro Aqua is a powerful cordless vacuum cleaner which does wet cleaning too. It combines vacuuming and mopping to quickly clean daily messes. Easy click-on/off mopping system to vacuum only, or vacuum and mop in one go!

Always at hand and convenient for daily usage

- Cordless cleaning: freedom to clean everywhere
- Powerful 18 V Lithium Ion battery for long runtime
- Bagless: One-step empty dust bucket
- Instant click on/off mopping system for wet cleaning
- Manoeuvrable and lightweight for easy handling
- Suitable to use on all floors
- Washable foam filter for life-long performance

Cleans everyday messes with vacuum and mop

- New mopping system with optimal wetness for all hard floors
- TriActive Turbo nozzle for powerful performance on carpets
- 3 layer filter technology captures micro particles
- PowerCyclone technology for exceptional vacuum cleaning performance

PHILIPS

2-in-1 Wet and Dry Cordless Vacuum Cleaner and Mop

Filters 90% bacteria and allergens Mop and vacuum at the same time , Lightweight, 40min run time, PowerCyclone technology

Highlights

PowerCyclone technology



The PowerCyclone technology delivers powerful vacuum cleaning performance. Air enters rapidly into the PowerCyclone and is accelerated further through the curved air pass to effectively separate dust from air.

3 layer filter



3 layer washable filter can capture >90% of allergens like pollen, pet hair and dust, for a clean air.

One-step empty dust bucket




The new bagless PowerPro Aqua vacuum cleaner allows you to dispose of dust from the dust bucket without having to touch it.

Innovative mopping system



The unique mopping system controls the water release to maintain optimal wetness for all hard floors throughout cleaning.

Cordless cleaning

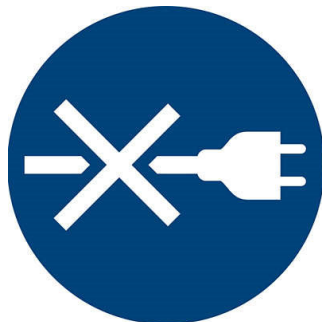

Without the cord, you are free to clean wherever you want on every type of floor.

Click on/off mopping system



With the magnets on the water tank, the mopping system can easily be clicked onto and off the nozzle.

TriActive Turbo nozzle



The TriActive Turbo nozzle delivers powerful performance on hard floors and carpets. The motorised brush and the optimised airflow pick up all dirt and fluff in one go.

Powerful Lithium Ion battery



Cordless cleaning with powerful 18 V Lithium Ion battery for 40 min runtime. With no more cable getting in your way, cleaning from room to room is hassle-free.

Light and manoeuvrable

Good manoeuvrability and light weight are assured with the new PowerPro Aqua vacuum cleaner for easy handling.

Suitable to use on all floors



Vacuum all hard floors and carpets. Click on the water tank to mop all types of hard floors.

2-in-1 Wet and Dry Cordless Vacuum Cleaner and Mop

Filters 90% bacteria and allergens Mop and vacuum at the same time , Lightweight, 40min run time, Power-Cyclone technology

FC6402/61

Specifications

Nozzles and accessories

- Accessories included: 2 microfibre pads
- Standard nozzle: TriActive Turbo Nozzle

Design

- Design features: On-off
- Colour: Grey

Weight and dimensions

- Dimensions of product (LxWxH): 200 x 250 (ground surface); 1150 (height) mm
- Weight of product: 4.7 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Performance

- Battery type: Li-Ion
- Sound power level: 83 dB
- Battery voltage: 18 V
- Charging time: 5 hour(s)
- Runtime: 40 min
- Surface coverage per tank: 50 m²

Filtration

- Dust capacity: 0.6 L
- Exhaust filter: Foam filter

Usability

- Clean water tank capacity (max): 0.2 L



Issue date 2023-08-03

Version: 1.1.1

EAN: 87 10103 72365 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Recommended to replace every 3-6 months depending on usage frequency. 2 microfibre pads are included in the pack; check www.philips.com to find out where to buy the microfibre pads. We cannot guarantee optimal cleaning results when microfibre pads from other brands are used.