

Philips Marathon
Bagless vacuum cleaner

AutoClean
Parquet

FC9236/03



Performs better for longer

Self-cleaning filter, no bag required

Unique AutoClean function to clean the bagless filter FC9236/03 of your vacuum cleaner easily and maintain optimal suction power

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Extra long reach for convenience

- More cleaning with less effort

Right tool for each type of floor

- Super Parquet nozzle and Turbo Brush nozzle

Optimal cleaning power every time

- AutoClean filter optimises suction power


Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

PHILIPS


Highlights

2000 Watt motor

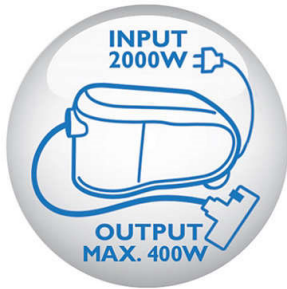

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

AutoClean filter

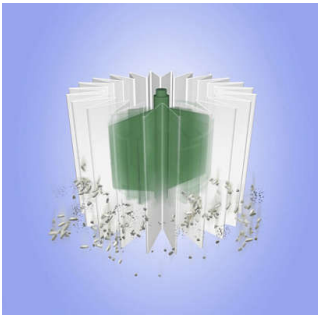

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through



Issue date 2023-04-14

Version: 1.0.1

the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Multi-nozzle



Superior cleaning on all floor types thanks to this consumer test winning multi-nozzle. Its wide air channel is designed for optimal airflow, providing effective cleaning even along walls. Its special double hinge ensures permanent contact with the floor for best cleaning results. Designed and produced in Germany by WesselWerk, this high quality nozzle has a metal soleplate with surrounding brushes that gently and thoroughly clean hard floors, crevices and carpets.

Super Parquet and Turbo Brush



The two additional nozzles enable you to vacuum clean all types of floors with the right tool. The Super Parquet nozzle delicately removes 3 x more sticky dirt from your hard floors. The Turbo Brush nozzle allows deep cleaning and quick hair and fluff removal from carpets. This results in 25% better cleaning performance on carpet floors.

12-m action radius

12-m action radius for more cleaning with less effort.

Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 78 dB
- Airflow (max): 37 l/s
- Suction power (max): 400 W
- Vacuum (max): 33 kPa
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s
- Input power (max): 2000 W
- Suction power (max): 400 W

Design

- Colour: Emperor red

Usability

- Tube coupling: Button
- Action radius: 12 m
- Action radius: 12 m
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 9 m
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: Multi-nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle, Turbo brush

Weight and dimensions

- Weight of product: 7.5 kg

Filtration

- Dust capacity: 1.5 L
- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- Filter type: HEPA

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com