



Philips PerfectCare Elite  
Steam generator iron

**Max. 7.2 bar pressure**

Up to 490 g steam boost  
1.8 l water tank capacity  
Detachable water tank



GC9642/60

## The most powerful steam for the fastest ironing\* with ultra-light iron

PerfectCare Elite is Philips' best and most efficient steam generator iron. With OptimalTEMP technology, you can now iron everything from jeans to silk with no temperature setting needed. Guaranteed no burns on all ironable garments.

### **No temperature setting needed; no burning, guaranteed**

- Safe to leave the hot soleplate on the ironing board
- Go from ironing jeans to silk; no need to change temperature setting

### **Fast ironing with continuous powerful steam**

- Easy and efficient descaling system
- Powerful steam for ultimate crease removal
- Save energy with ECO mode
- Philips' best gliding and most scratch-resistant soleplate

### **Ultimate ironing experience**

- Automatic switch-off for safety and energy saving
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Lightweight and comfortable to handle

# PHILIPS

Steam generator iron  
Max. 7.2 bar pressure Up to 490 g steam boost, 1.8 l water tank capacity, Detachable water tank

GC9642/60

## Highlights

### Ultra-powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even tough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

### 1.8 l detachable water tank



The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.8 l capacity, so you get the convenience of up to 2 hours of continuous use, with no need to top-up the tank.

### Energy saving



ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

### OptimalTEMP technology




With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron all fabrics, from jeans to silk, with no burning guaranteed thanks to the perfect combination of temperature and continuous powerful steam.

### Safe carry lock



Your steam generator iron includes a safe carry lock, which securely fastens your iron to its base without the risk of it slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.


### Safe rest

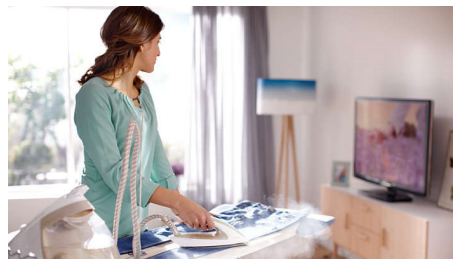

Innovative OptimalTEMP technology guarantees no burning on any ironable fabric. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing

board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

### Safety auto off

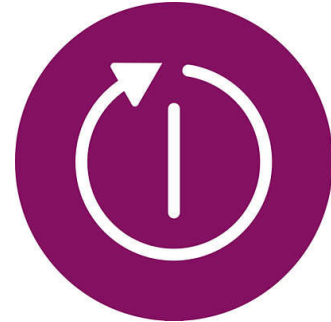

The safety auto-off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind about safety.

### T-ionicGlide soleplate



The T-ionic Glide is Philips' most premium soleplate, promising superior gliding for faster, effortless ironing. It has a stainless steel base which is harder and more durable than aluminium, with an integrated titanium oxide layer for advanced scratch resistance. Plus the carefully designed shape and vents provide even better steam distribution for faster crease removal.

## Steam generator iron

Max. 7.2 bar pressure Up to 490 g steam boost, 1.8 l water tank capacity, Detachable water tank

GC9642/60

# Specifications

### Easy to use

- Heat-up time: 2 min
- Water tank capacity: 1800 ml
- Safe on all ironable fabrics: Even delicates like silk
- Soleplate gliding performance: 5 stars
- Soleplate name: T-ionicGlide
- Safety auto off
- Detachable water tank
- Low water alert
- Refill anytime during use
- Tap water suitable
- Power cord length: 1.8 m
- Hose length: 1.7 m
- Precision steam tip
- Ready to use: Light indicator, Sound indicator
- Soleplate scratch resistance: 5 stars
- Extra-large filling hole

### Technology

- OptimalTEMP technology
- Cyclonic steam chamber
- For all ironable fabrics
- No burns
- No temperature settings needed
- Smart Control Processor

### Fast crease removal

- Pressure: Max. 7.2 bar
- Power: Max 2400 W
- Steam boost: Up to 490 g
- Continuous steam: Up to 145 g/min

- Vertical steam
- Voltage: 220 - 240 V
- Ready to use: 2 min
- Variable steam levels
- Steam-on-demand

### Scale management

- Descaling and cleaning: Easy De-calc Plus
- Descaling reminder: Light, Yes

### Storage

- Carry lock: For transportation and safety
- Cord storage: Cord storage compartment, Velcro fix
- Hose storage: Hose storage compartment

### Size and weight

- Weight of iron: 0.8 kg
- Packaging dimensions (W x H x D): 31 x 35 x 51 cm
- Product dimensions (W x H x D): 23.3 x 28.5 x 45.3 cm
- Weight of iron + base: 5.1 kg

### Green efficiency

- Energy saving mode
- Product packaging: 100% recyclable
- User manual: 100% recycled paper

### Guarantee

- 2 year worldwide guarantee



Issue date 2022-06-21

Version: 2.2.1

EAN: 08 71010 37935 71

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Iron weight & steam rate (norm IEC60311), vs. the 10 best-selling steam generators; tested Dec. 2014