

Philips Jewel  
Vacuum cleaner with bag

AllergyCare

FC9074/01



## Beautiful results in the blink of an eye

### Tri-active nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results, fast. It comes with the patented Tri-active nozzle which gives you three cleaning actions in one stroke.

#### **Highly efficient anti-allergy system**

- HEPA AirSeal plus HEPA 13 filter

#### **Easy cleaning, even around furniture**

- TriActive nozzle with unique 3-in-1 action

#### **Dust bag safely traps all dust**

- s-bag Clinic catches up to 99.9% of all dust

#### **Beautiful floors in a blink of an eye**

- 2000 Watt motor generating max. 450 Watt suction power

#### **Leaves a fresh and clean scent**

- Active fragrance control dispenses a pleasant smell

# PHILIPS

# Highlights

## 2000 Watt motor



The highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

## HEPA AirSeal, HEPA 13 filter




This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

## s-bag Clinic - Anti-allergy



This dust bag filters up to 99.9% of pollen, spores and allergens. Ideal for people with allergies!

## Active fragrance control

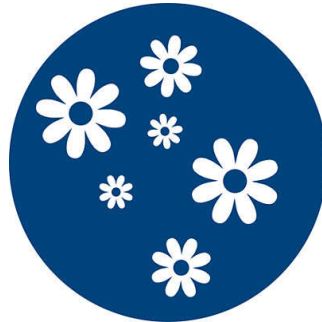

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Airflow (max): 43 l/s
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s
- Input power (max): 2000 W
- Suction power (max): 450 W

## Design

- Colour: Deep red

## Usability

- Tube coupling: Button
- Action radius: 10 m
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 7 m
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette

## Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip

## Weight and dimensions

- Weight of product: 5.7 kg

## Filtration

- Dust bag type: s-bag Clinic Anti-allergy
- Dust capacity: 3 L
- Dust capacity: 3 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)