



Philips MiniVac
Handheld vacuum cleaner

3.6V battery

Bagless Cyclonic
Crevice and brush tool

FC6140/01

Powerful MiniVac for a better cleaning result

Bagless cyclonic airflow and aerodynamic nozzle

Enjoy a better cleaning result with the powerful Philips MiniVac 3.6 V vacuum cleaner. The bagless cyclonic airflow and 2-stage filtration system guarantee lasting performance, while the aerodynamic nozzle ensures a superior dust pick-up.

Easy to use

- Looped handle ensure optimum grip
- One-step click-off nozzle for easy emptying

Always at hand

- Slim charging base (for wall or table)

Optimal filtration

- 2-stage bagless cyclonic airflow for optimal filtration

High power guaranteed

- Powerful 3.6 V NiMH batteries

Superior cleaning results

- Aerodynamic nozzle design for a better dust pick-up

PHILIPS

Highlights

Aerodynamic nozzle design



The aerodynamic nozzle design of the Philips MiniVac is created to ensure an optimum dust pick-up of even the most fine dust particles. The ergonomic shape of the nozzle helps you to clean even the most hard-to-reach areas.

2-stage bagless cyclonic



The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.


Powerful 3.6 V NiMH batteries



The powerful longer-lasting Nickel-Metalhydride (NiMH) batteries of the Philips MiniVac do not cope with memory effect. This effect reduces the capacity of the battery over time, reducing the runtime. This Mini Vac with NiMH batteries ensures longerlasting

power versus products with the standard Nickel-Cadmium (NiCd) batteries that do have memory effect.

Slim charging base (for wall or table)

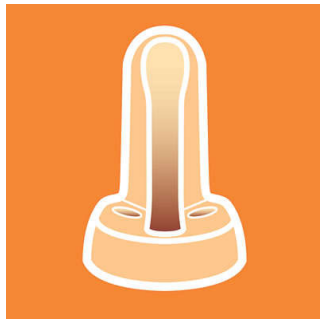


You can store the Philips Mini Vac on a convenient charging base, mounted on a wall or placed on a table. This means the Mini Vac, with its powerful rechargeable battery, is always ready when you are.

One-step click-off nozzle



The Philips MiniVac vacuum cleaner is easy and quick to empty and hygienic to clean. The Philips MiniVac has a nozzle that easily clicks off in just one step, so you can empty the Mini Vac without touching the dirt.

Comfortable grip

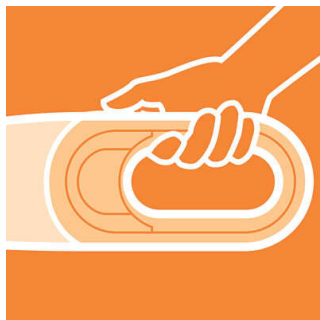

The Philips Mini Vac has a looped handle that ensures optimum grip. You can grab the Mini Vac in any way you like.

Specifications

Weight and dimensions

- Appliances per A-box: 6
- Dimensions of packaging (LxWxH): 460 x 160 x 160 mm
- Weight of product: 1.3 kg
- Dimensions of A-box (LxWxH): 508 x 335 x 490 mm

Performance

- Battery voltage: 3.6 V
- Charging time: 16-18 hour(s)
- Vacuum (max): 2.7 kPa
- Runtime: 9 minute(s)
- Input power (max): 45 W
- Suction power (max): 8 W
- Noise level (Lc IEC): 75 dB
- Airflow (max): 620 l/min

Design

- Color: Comfort white

Usability

- Special features: Charging indication, Soft touch handle

Nozzles and accessories

- Other accessories: Charging base

Filtration

- Dust capacity: 0.5 L
- Filter system: 2-stage cyclonic action



Issue date 2023-04-14

Version: 1.1.2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com