



Philips SpeedCare  
Steam generator iron

Max 4.5 bar pump pressure

140 g steam boost  
Carry lock  
1.2-l fixed water tank


## Faster and easier ironing\*\*

with twice as much steam\*\* as a steam iron

The Philips SpeedCare steam generator delivers more steam than a steam iron, helping you to speed up your ironing. Enjoy more quality time with your family thanks to the reduced ironing time with the Philips SpeedCare steam generator iron.

### Fast and powerful ironing

- Max 4.5 bar pump pressure
- Continuous steam up to 100 g/min
- Ready to use in 2 minutes with unlimited refill
- Triple precision tip for optimal control and visibility
- Smart Calc cleaning system with a sound and light cleaning reminder
- 1.2-l water tank and refill at any time during ironing
- Compact size and light weight for easy storage
- Ceramic soleplate for better gliding performance
- Lock your iron securely to the base station

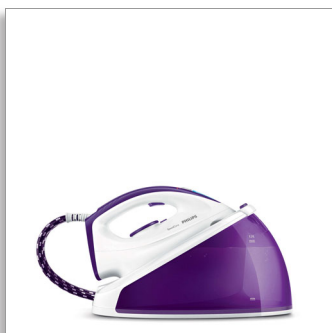

GC6612

# PHILIPS

# Highlights

## Max 4.5 bar pump pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

## Smart Calc cleaning system



The Smart Calc cleaning system is an integrated descaling and cleaning function that protects your steam generator iron. After around 10 hours of ironing, your steam generator iron will remind you to perform the Calc cleaning process with a sound and light notification. The iron conveniently rests on the Calc container as it collects the dirty water, so you don't have to strain to hold the iron during the process. After all the water has been collected in the container, your steam generator iron is ready to use again.

## Steam ready in 2 minutes



Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

## Compact size and light weight



Thanks to the revolutionary ProVelocity technology, we made your steam generator iron more compact than ever before. The compact steam generator fits easily on your ironing board making your ironing more convenient. In addition, your steam generator takes much less storage space.

## 1.2-l water tank



The SpeedCare steam generator has a 1.2-l water tank capacity to allow you to iron for

over an hour. It helps to reduce the number of refills required for large laundry loads. The technology will also allow you refill the water tank during ironing without the appliance cooling down for 2 hours while it is waiting to be refilled.

## Triple precision tip



The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek nose design. The triple precision tip enables you to reach even the most tricky areas, e.g. around the buttons or between the pleats.

## Ceramic soleplate



Ceramic soleplate is scratch-resistant, glides well and is easy to clean.

# Specifications

## Calc management

- Calc clean reminder
- Suitable for tap water
- Calc clean solution: Smart Calc Clean
- Filtered water recommended

## Accessories

- Calc Clean container

## Technical specifications

- Packaging dimensions: 26.4 x 30.3 x 40.4 cm
- Voltage: 220 - 240 V
- Weight of iron + base: 2.6 kg
- Weight of iron: 1.1 kg
- Product dimensions: 19.8 x 21.7 x 34.6 cm

## Easy to use

- Filling and emptying water: Extra-large filling hole
- Water tank capacity: 1200 ml
- Heat-up time: 2 min

- Refill any time
- Storage solution: Carry lock
- Cord freedom (swivel): 180 degree cord freedom
- Cord storage: Cord clip
- Ultra-light and comfortable
- Power cord length: 1.8 m
- Hose length: 1.6 m
- Hose storage: Hose storage compartment

## Service

- 2-year worldwide guarantee

## Fast and powerful crease removal

- Soleplate: Ceramic
- Continuous steam output: 100 g/min
- Power: 2400 W
- Pressure: Max 4.5 bar pump pressure
- Steam boost: 140 g
- Vertical steaming
- Steam output control



Issue date 2023-10-10

Version: 1.0.2

EAN: 87 10103 74883 0

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Compared to Philips steam iron EasySpeed