

Philips Marathon
Bagless vacuum cleaner

PerfectCare

FC9218/03



Professional cleaning

High cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the bagless Marathon delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power in its category, and it's the quietest bagless available.

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Outstanding results on carpets and furniture

- Turbo Brush nozzle removes 25% more hairs and dust

Thorough cleaning results all the time

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power


Superior results on all floors

- Test winning multi-nozzle for thorough and gentle cleaning

PHILIPS

Highlights

Powerful and quiet motor

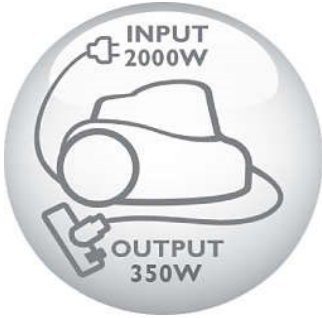

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design also makes it exceptionally quiet.

Lasting suction power

Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95%

filtration) before it is exhausted. No escape is possible.

Multi-nozzle




Superior cleaning on all floor types thanks to this consumer test winning multi-nozzle. Its wide air channel is designed for optimal airflow, providing effective cleaning even along walls. Its special double hinge ensures permanent contact with the floor for best cleaning results. Designed and produced in Germany by WesselWerk, this high quality nozzle has a metal soleplate with surrounding brushes that gently and thoroughly clean hard floors, crevices and carpets.

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage during use on hard floors.

Super Parquet nozzle

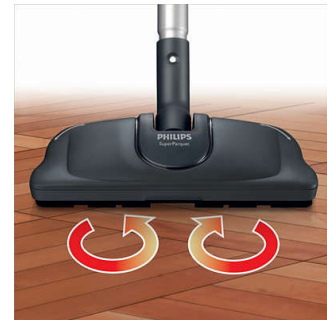

The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve the best results without requiring any detergents or brushes.



Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Airflow (max): 40 l/s
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s
- Input power (max): 2000 W
- Suction power (max): 350 W

Design

- Colour: Black

Usability

- Tube coupling: Button
- Action radius: 12 m
- Action radius: 12 m
- Cord length: 9 m

- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Cord length: 9 m
- Power control: Electronic on appliance
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: Multi-nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle, Turbo brush

Weight and dimensions

- Weight of product: 7.2 kg

Filtration

- Dust capacity: 2 L
- Dust capacity: 2 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com