

Philips MiniVac
Handheld vacuum cleaner

900 W

FC6130



Efficiently traps even the finest dust

The first Mini Vac with HEPA filtration

This powerful Philips Mini Vac is suitable for your basic cleaning needs: it comes with a comfortable shoulder strap and a brush and hose for easy cleaning. The extra HEPA outlet filter ensures even the finest dust is trapped inside.

Clean air in your home

- Extra HEPA outlet filter to trap fine dust

Easily cleans delicate surfaces

- Brush tool and flexible hose

Comfortable grip

- Soft touch handle

Easy to empty

- One-step click-off nozzle for easy emptying


Lasting suction power

- Cyclonic airflow with 3-stage filtration system

PHILIPS

Highlights

Extra HEPA outlet filter

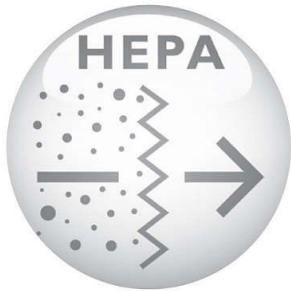

The extra HEPA outlet filter ensures that even the finest dust and microscopic vermin stay inside the Mini Vac, so only clean air will come out.

900 Watt motor



The powerful 900W motor ensures a very high suction power for a Mini Vac, for a great cleaning result.

Brush tool and flexible hose



The flexible hose assures a comfortable reach and the brush tool ensures easy cleaning of delicate surfaces.

One-step click-off nozzle



The Philips MiniVac vacuum cleaner is easy and quick to empty and hygienic to clean. The Philips MiniVac has a nozzle that easily clicks off in just one step, so you can empty the Mini Vac without touching the dirt.

Cyclonic and 3-stage filter



The Philips Mini Vac's cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 3-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the pleated, second filter traps the finer dust particles. The extra HEPA outlet filter ensures that even the finest dust and microscopic vermin stay inside the Mini Vac.

Soft touch handle



The soft touch handle ensures a comfortable grip. The soft rubber coating feels gentle and gives the firm grip you need.

Specifications

Weight and dimensions

- Dimensions of packaging (LxWxH): 460 x 165 x 210 mm
- Appliances per A-box: 4
- Weight of product: 2.2 kg
- Dimensions of A-box (LxWxH): 475 x 345 x 440 mm

Performance

- Battery voltage: 4.8 V
- Vacuum (max): 15.5 kPa
- Runtime: 9 minute(s)
- Input power (max): 900 W
- Suction power (max): 150 W
- Noise level (Lc IEC): <84 dB
- Airflow (max): 24.5 l/min

Design

- Design features: Translucent dust chamber
- Color: Comfort white and lime green

Usability

- Special features: Soft touch handle
- Cord length: 7 m

Nozzles and accessories

- Other accessories: Cord clip, Flexible hose, Shoulder strap

Filtration

- Dust capacity: 0.4 L
- Filter system: Dry
- Filter type: HEPA



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com