



## Philips Pure Essentials Coffee maker

- With glass jug
- Made in Germany
- White

HD7690/30

## Have it your way, exactly your way

### My Aroma Control for personal strength setting

This sophisticated Philips coffeemaker is ideal for people seeking excellent quality, in aroma as well as in design. The strength control feature and timer allow you to brew your filter coffee to your personal liking, at the time you want

#### Great taste and aroma

- 1.400 Watt

#### Designed around you

- Strength select for adjusting the intensity of your coffee
- Decalcification indicator light

#### Easy to experience

- Detachable water tank for easy filling
- Drip stop to pour a cup of coffee whenever you like
- Auto shut-off after 2 hours
- Swing filter holder for easy filling of coffee
- Cable storage for easy placement in your kitchen
- Dishwasher-safe parts for easy cleaning
- Timer to wake up with the smell of fresh coffee

# PHILIPS

# Highlights

## 1.400 Watt



The high-speed pump of your Philips coffee machine will prepare your coffee faster with the optimal coffee aroma.

## Auto shut-off



Forgot to turn off the coffee machine? Don't worry! 2 hours after brewing the coffee, the coffee machine will shut off automatically to save energy.

## Cable storage



Spare cable can be stored in the cable compartment under the coffee maker. It enables placing the coffee maker nicely in your kitchen.

## Strength select




Adjust the intensity of your coffee from mild, medium or intense coffee.

## Detachable water tank



The water tank is detachable, which makes it easy to fill water or clean the water tank.

## Dishwasher-safe parts

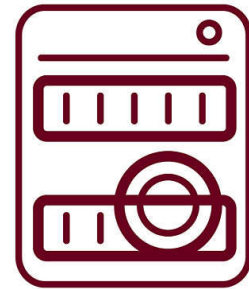


The jug and filter holder can be easily cleaned in the dishwasher.

## Decalcification indicator


The Philips coffee machine will remind you when to descale your appliance. Regular descaling ensures the best taste of your coffee and prevents lime scale from tap water.

## Swing filter holder

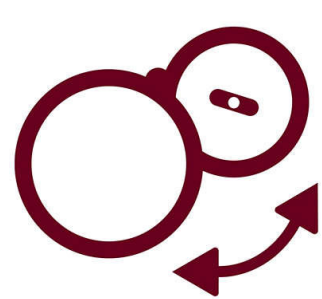


The filter holder is opened by swinging it to the side, which makes the filling of coffee easy. The filter holder is also detachable, for easy cleaning.

## Timer

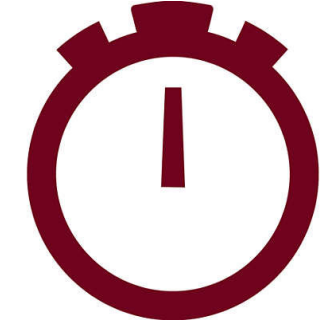

Wake up with the smell of fresh coffee thanks to the timer. Prepare your coffee maker, set the time, and a fresh jug of coffee is brewed at the time you desire.

## Drip stop

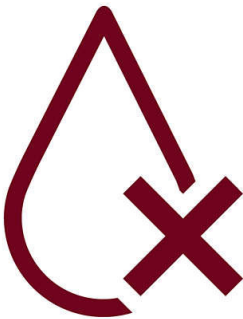

The drip stop allows you to pour a cup of coffee before the full brewing cycle is finished.

# Specifications

## Weight and dimensions

- Product weight: 2 kg
- Product dimensions (L x D x H): 382 x 196 x 395 mm
- Water tank capacity: 1.2 L
- Packaging weight: 2.7 kg

## Technical specifications

- Voltage: 220-240 V
- Power: 1400 W
- Supported coffee types: Ground coffee
- Cord length: 0.88 m
- Country of origin: Designed in the Netherlands, Made in China
- Frequency: 50/60 Hz
- Brewing time: < 10 minute(s)
- Capacity: 1.2 L / 10-15 cups
- Coffee jug type: Glas aroma jug
- Cord storage

## General specifications

- Ease of cleaning & maintenance: Dishwasher-safe

parts

## Accessories

- Jug: HD7985 (white), HD7986 (black)

## Design

- Color: White

## Design specifications

- Color(s): HD 7690/30 White/stainless steel/ red accents

## Your filter coffee your way

- Automatic switch-off

## Good filter coffee made easily

- Water level indication
- Detachable filter holder
- Dishwasher safe parts
- Drip stop



Issue date 2022-06-22

Version: 1.1.1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)