



**Philips PerfectCare Azur  
Steam iron**

Steam 50g/min; 200g steam boost

T-ionicGlide soleplate  
Safety Auto off + Anti-calc  
Safe for all ironable garments



**GC4918/30**

## Carefree ironing, no setting required

### Ironing perfected

Iron any ironable garment from silk, to linen, to cotton, to cashmere, in any order, without adjusting the temperature. PerfectCare Azur delivers perfect results without the risk of burn or shine. Ironing is now simpler than ever.

#### **Fast and powerful ironing**

- 2800 W iron for fast heat up and powerful performance
- Steam boost up to 200 g
- Steam output of up to 50 g/min for better crease removal

#### **Comfortable ironing**

- Innovative CordGuide
- Suitable for tap water with Double Active Calc Clean system
- Iron switches off automatically when left unattended
- T-ionicGlide: our best 5-star rated soleplate
- Quattro Precision Tip for easy reach in tricky areas

#### **One perfect setting for all your clothes**

- 100% safe on all ironable garments
- 100% easy to use, no adjustment required

#### **One perfect setting for all your clothes**

- 100% fast on all fabrics; no other steam iron is faster

# PHILIPS

Steam iron

Steam 50g/min; 200g steam boost T-ionicGlide soleplate, Safety Auto off + Anti-calc, Safe for all ironable garments

GC4918/30

# Highlights

## OptimalTemp technology



The latest revolution in ironing to deliver the perfect combination of steam and temperature. It's made to ensure you get speedy ironing and great results on tough creases, with no setting required, and is safe on all ironable fabrics. The perfect combination of steam and temperature because: 1) the Smart Control Processor sets the right temperature 2) the HeatFlow technology enables an even steam and temperature balance.

## 100% safe



100% safe on all fabrics even the most delicate like silk, cashmere, wool, polyester. Independent iron testing institutes have used PerfectCare on the most sensitive ironable garments and they confirmed excellent ironing results.

## 100% fast

100% fast to iron, no sorting required. Iron all your garments with more effective steam.

## 100% easy to use



100% easy to use, no adjustment required. You can now iron all ironable garments one after the other, without having to wait or to adjust the iron's temperature dial.

## T-ionicGlide soleplate



T-ionicGlide is Philips' premium soleplate. Delivering a new standard in glide and scratch-resistance for OptimalTemp irons. The patented new coating will secure excellent results. The carefully designed shape and vent holes provide even steam distribution for easy crease removal with the steam iron.


## Suitable for tap water



PerfectCare Azur steam iron is designed to be used with tap water. Double Active Calc

Clean: A smart combination of Calc Pills and a regular Self Clean reduce the scale built-up. For better ironing results we recommend to use demineralised water. This ensures a consistent steam flow from your iron.

## Safety auto off

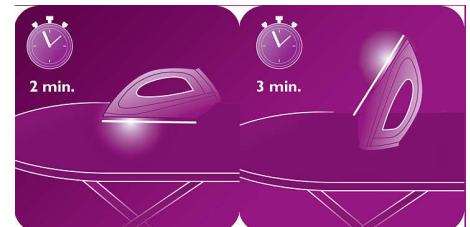

The iron shuts off automatically when left unattended. If left on it's heelrest the steam iron will switch off in 3 minutes, when left resting on the soleplate it will take 2 minutes before the iron shuts off.

## Quattro Precision Tip



The Quattro Precision Tip of the steam iron allows you to reach into the most difficult to reach areas while ironing. Iron closely around the buttons with the button groove; having a speedy designed shape for better visibility; a Precision SteamBoost area for a focused shot of steam and the slim tip for delicate ironing complete the Quattro Precision Tip.

## Steam iron

Steam 50g/min; 200g steam boost T-ionicGlide soleplate, Safety Auto off + Anti-calc, Safe for all ironable garments

GC4918/30

# Specifications

### Calc management

- Calc clean solution: Double active calc clean
- Suitable for tap water
- Calc clean reminder: Yellow flashing

### Technical specifications

- Weight of iron: 1.75 kg

### Easy to use

- Water tank capacity: 350 ml
- Safety auto off
- Drip-stop
- Soft grip
- Cord freedom (swivel): 180 degree cord freedom
- Cord storage: Cord clip
- Power cord length: 2.5 m

- Fast and easy filling
- CordGuide: Keep your cord out of the way

### Comfortable ironing

- Cord length: 2.5 m

### Sustainability

- Energy saving: 10% energy reduction

### Fast and powerful crease removal

- Soleplate: T-ionicGlide
- Continuous steam output: Up to 50 g/min
- OptimalTEMP technology
- Power: 2800 W
- Spray
- Steam boost: 200 g



Issue date 2023-10-10

Version: 1.0.2

EAN: 87 10103 65162 8

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)