

# PHILIPS

Wet and dry electric  
shaver

Shaver series 9000  
SensioTouch

UltraTrack & GyroFlex 3D

60 min cordless use/1 hr charge

Precision trimmer

RQ1260/17



## Ultimate shaving experience

with GyroFlex 3D system

Our most advanced shave yet, the SensioTouch 3D RQ1260 shaver gives you the ultimate shaving experience. The GyroFlex 3D system follows every contour of your face and shaves every hair in just a few strokes with its UltraTrack heads.

### **Follows the unique contours of your face**

- Philips GyroFlex 3D system adjusts seamlessly to every curve

### **Sensationally smooth shave**

- UltraTrack heads catch every hair with just a few strokes
- Shavers with Super Lift & Cut Action

### **An electric shaver that takes care of your skin**

- Aquatec seal for comfortable dry shaves and refreshing wet shaves
- Smooth, low-friction SkinGlide to minimise irritation

### **Shave with perfect control and precision**

- Easy-grip handle with ergonomic grip for close control
- Skin-friendly precision trimmer


# Shaver series 9000 SensoTouch

Wet and dry electric shaver

RQ1260/17

## Highlights

### GyroFlex 3D Shaver

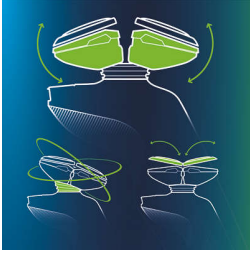


The GyroFlex 3D contour-following heads of the shaver adjust seamlessly to every curve of your face, minimising pressure and irritation on your skin.

### Super Lift & Cut Action




The dual-blade system built into the Philips electric shaver lifts hairs to cut comfortably below skin level for a closer shave.

### Easy grip

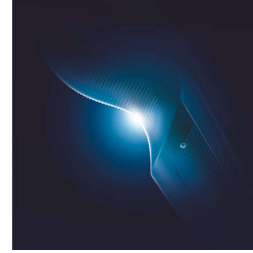

The easy-grip shaver handle has an ergonomic grip with anti-slip coating, ensuring close control for an extra-precision shave.

### UltraTrack Shaver Heads

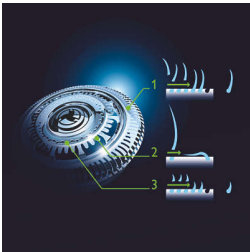


Get a close shave that minimises skin irritation. The shaving head has 3 specialised tracks: slots for normal hair, channels for long or flat laying hair and holes for the shortest stubble on your face.

### Aquatec




The Aquatec wet and dry seal of the electric shaver lets you choose how you prefer to shave. You can get a comfortable dry shave or a refreshing wet shave using a shaving gel or foam for extra skin comfort.

### Precision trimmer

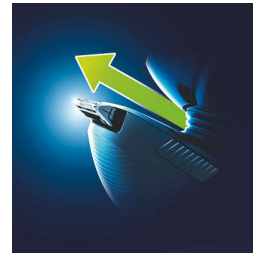

The unique skin-friendly precision trimmer system is built to avoid unnecessary skin contact. Easy to use for perfect moustache and sideburn trimming.

### SkinGlide

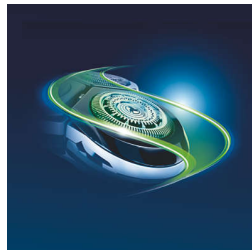

The low-friction SkinGlide shaving surface of the electric shaver slides smoothly along your skin for a close, easy shave.

# Shaver series 9000 SensoTouch

Wet and dry electric shaver

RQ1260/17

## Specifications

### Accessories

**Stand:** Charging stand

**Pouch:** Soft pouch

**Maintenance:** Cleaning brush, Protective cap

### Power

**Battery type:** Lithium-ion

**Stand-by power:** 0.15 W

**Run time:** 60 min

**Automatic voltage:** 100–240 V

**Max power consumption:** 5.4 W

### Design

**Finishing:** Metallic frame, LED Display

**Handle:** Slim handle, Easy grip, Anti-slip grip

**Colour:** Silver

### Service

**Replacement head:** Replace every 2 yrs with RQ12

**2 year guarantee**

### Shaving Performance

**Contour following:** GyroFlex 3D contour following

**Shaving system:** UltraTrack shaving heads, Speed XL shaving heads, DualPrecision System,

Patented Super Lift & Cut

**SkinComfort:** SkinGlide

**Styling:** Skin-friendly precision trimmer

### Ease of use

**Display:** Five level battery indicator, Battery low indicator, Charge indicator, Travel lock, Cleaning indicator, Replace shaving heads indicator

**Wet & Dry:** Wet and dry use

**Charging:** 1 hour, Rechargeable, Cordless, Quick charge

**Cleaning:** Washable

**Shaving time:** Up to 20 days

