

Philips
Robot vacuum cleaner

Super Slim (5 cm)

2-stage cleaning system
XXL side brushes
50 min runtime

FC8802/71



The slimmest robot vacuum cleaner

Cleans under furniture where others can't reach

Philips EasyStar is the robot vacuum that cleans your floors for you. With its slim design it reaches under low furniture and its long side brushes clean where dust accumulates. Clean floors, effortlessly, even in places others can't reach.

Easy to use

- 1-button operation makes it very easy to use

Cleans where others can't reach

- Slim design to clean where others can't reach

Cleans where dust accumulates

- Extra long side brushes to clean where dust accumulates

Captures dirt and dust

- 2-stage cleaning system to capture dirt and dust


Moves by itself avoiding stairs and edges

- Infrared sensors help it move by itself avoiding stairs

PHILIPS


Highlights

Slim design

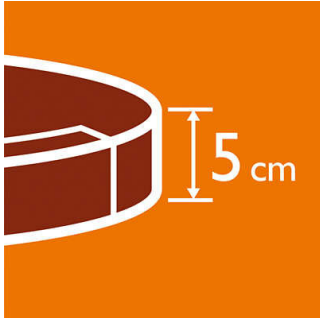

At only 50mm of height, its slim design allows it to seamlessly clean underneath furniture where dust accumulates. It cleans where others can't reach.

Extra long side brushes

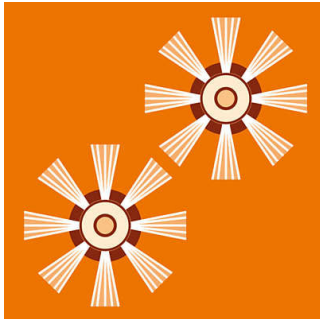

With its extra long side brushes, it reaches deeper into corners and closer to walls. It cleans where dust accumulates.

1-button operation



Just turn it ON and it will immediately start cleaning your floors. It is very easy to use.

2-stage cleaning system



Side brushes and a vacuum remove dirt and dust from your floors. The exhaust filter traps fine dust and particles. It captures dirt and dust.

Infrared sensors



As it drives around your home, infrared sensors underneath the robot prevent it from falling into voids. It moves by itself avoiding stairs and edges.

Specifications

Nozzles and accessories

- Other accessories: 2 x Exhaust filters, AC power adaptor, Side brushes (2 pairs)

Design

- Color: Metallic Anthracite

Weight and dimensions

- Dimensions of product (LxWxH): 300 x 50 mm
- Weight of product: 1.3 kg
- Weight with packaging: 2.3 kg

Sustainability

- Stand-by power consumption: 0.7 W

Performance

- Battery type: 14.4 V NiMH / 800 mAh
- Charging time: 4 hour(s)
- Runtime: 50 minute(s)

Filtration

- Dust capacity: 0.2 L

Usability

- Special features: Stairs detector
- Floor types: Wood, laminate and tiles



Issue date 2023-04-29

Version: 1.1.1

EAN: 87 10103 60737 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com