

Philips PowerPro  
Bagless vacuum cleaner

**2100W**  
PowerCyclone 5  
HEPA 12 filter

**FC8764/01**



## 40% more dust pick-up for a better clean

With PowerCyclone technology and AeroSeal nozzle

The new Philips PowerPro FC8764/01 bagless vacuum cleaner picks up more dust in one go, so your floor gets cleaner with fewer strokes. You can therefore spend more time doing the things you really enjoy.

### **Easy to clean**

- Advanced dust container design for hygienic emptying

### **Extra long reach for convenient cleaning**

- More cleaning with less effort

### **More dust pick-up for faster cleaning**

- Powerful 2100 Watt motor for excellent cleaning results
- AeroSeal nozzle captures more dust and fluff per stroke
- PowerCyclone 5 technology separates dust and air in one go

**PHILIPS**

## Highlights

### AeroSeal nozzle



The AeroSeal nozzle captures more dust and fluff per stroke thanks to the special designed soleplate. It gently opens up the carpet to remove the dust deep down. Thanks to the optimal sealing the dust is transported into the cyclone with maximum airflow.

### 2100 Watt motor



This powerful 2100 Watt motor generates max. 370 Watt suction power for excellent cleaning results.


### Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-

hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

### 10 m action radius

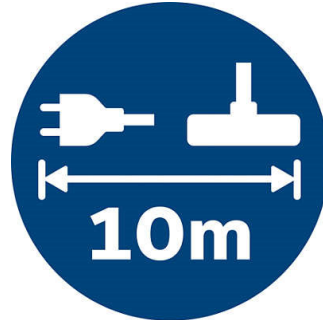

10 m action radius for cleaning with less effort.

### PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

## Specifications

### Performance

- Input power (IEC): 1800 W
- Input power (max): 2100 W
- Noise level (Lc IEC): 80 dB
- Suction power (max): 370 W
- Vacuum (max): 34 kPa
- Airflow (max): 38 l/s

### Design

- Color: Deep black

### Usability

- Cord length: 7 m
- Action radius: 10 m
- Tube coupling: Easy release
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

### Nozzles and accessories

- Standard nozzle: AeroSeal nozzle
- Accessories included: Brush, Crevice tool, Small nozzle
- Accessory storage: On tubeclip

### Weight and dimensions

- Dimensions of product (LxWxH): 440 x 300 x 290 mm
- Weight of product: 5.5 kg

### Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

### Filtration

- Dust capacity: 2 L
- Exhaust filter: EPA 12 filter
- Motor filter: Lifetime washable filter
- HEPA Air Seal



Issue date 2023-04-13

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\*\* Dust pick-up results compared to the top selling bagless vacuum cleaner in Europe, tested on average by external test institute according to DIN EN 60312/11/2008 on carpet, October 2011