


Philips Norelco
Bodygroom 3100
Showerproof body
groomer, Series 3000

Skin comfort system

3 fixed combs
50mins cordless use/8h charge
Back attachment

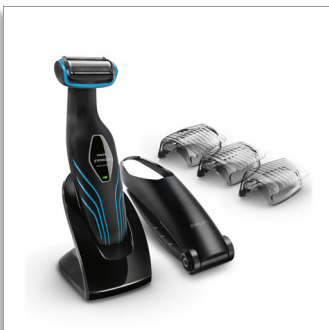

BG2034/49

Close trim, comfortable shave

Even in hard-to-reach areas

The Series 3000 is designed to power through hair, without compromise on skin comfort. Whether on the chest or hard-to-reach areas like the back, you can shave with the skin comfort system or trim using the length combs included.

Easy to use

- Extra long handle makes it easier to reach your back
- Easy to clean and use in or out of the shower
- 50 minutes cordless use after an 8-hour charge
- Easy to grip

Skin-friendly performance

- Rounded tips and hypoallergenic foil for skin comfort
- Includes 3 combs for a 1/8, 3/16 or 9/32" trim
- Confidently trim or shave all body zones

Built to last

- Warranty for purchase protection

PHILIPS
NORELCO

Highlights

Skin comfort system



Designed to be safe and comfortable for underarms, chest & abs, back & shoulders, groin area and legs. The skin comfort system catches and cuts hairs of different lengths, without the need for multiple tools or skin contact with sharp edges. The bi-directional trimmers cut longer hairs, which are shaved by the foil for a closer result.

Skin-friendly tips and foil



The skin comfort system features a hypo-allergenic foil and rounded tips to protect your skin while shaving.


3 combs included, 1/8-9/32"



3 combs included for different body hair lengths. Attach the combs onto the shaving system, to

trim hair to fixed length settings of 3mm (1/8"), 5mm (3/16"), or 7mm (9/32"). You can use the shaving system without the combs, for a closer result. For thicker hair, pre-trimming with the fixed combs is recommended.

Shave your back

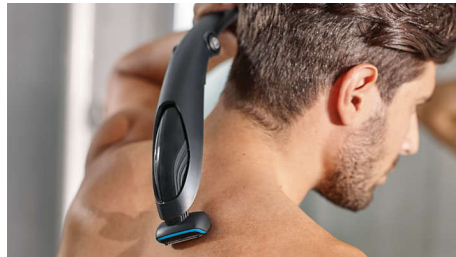

Conveniently remove back hair. This attachment has been specially designed for convenient back grooming.

Rechargeable battery power



High-power NiMH battery for full body use, with 50 minutes of cordless use after an 8-hour charge. The battery light indicates power status, when the battery is low or full.

100% Showerproof



Provides a comfortable and close result in or out of the shower. The body groomer is 100% water-resistant, so you can simply rinse it clean when you've finished. For longer hair, trimming performance may be better on dry hair.

Ergonomic grip



Your body groomer is easy to hold and manoeuvre, with a rubber ergonomic grip to help you keep control while you trim.

Built to last



All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Specifications

Create the look you want

- Number of length settings: 3 integrated length settings

Accessories

- Back handle attachment

Power

- Battery type: Ni-MH
- Charging: 8 hours full charge
- Run time: 50 minutes

Design

- Handle: Ergonomic grip & handling

Service

- 2-year worldwide warranty

Cutting system

- Cutter width: 32 mm
- Shaving element: Foil with two pre-trimmers
- Skin comfort: Skin comfort system

Ease of use

- Maintenance free: No oil needed
- Wet & Dry: Showerproof and easy cleaning, Fully washable
- Secured length settings
- Operation: Cordless use



Issue date 2023-09-21

Version: 7.5.1

UPC: 0 75020 04594 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com