

Philips Marathon
Bagless vacuum cleaner

2000W
Animal

FC9206/01



Professional cleaning

with high cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the bagless Marathon delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power in its category. It's also the quietest bagless available.

Outstanding results on carpets and furniture

- Turbo nozzle removes 25% more hairs and fluff

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Traps dust and allergens inside

- EPA 12 filter with 99.5% filtration of dust


Thorough cleaning results all the time

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power

PHILIPS

Highlights

Powerful and quiet motor

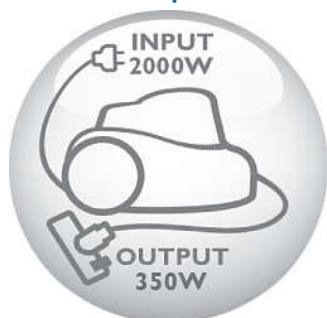

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design makes it also exceptionally quiet.

Lasting suction power

Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.

EPA 12 filter



This special outlet filter captures 99.5% of the dust before the air is blown back into your room, ensuring a clean, dust-free, environment.



Turbo nozzle



The turbo brush nozzle removes 50% more fluff from carpets than standard nozzles. The rotating brushes also restore the pile during every cleaning job, keeping carpets and rugs in optimum condition.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Design

- Color: Black

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

Usability

- Action radius: 12 m
- Cord length: 9 m
- Tube coupling: Button
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Brush, Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Additional nozzle: Turbo brush
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 7.2 kg

Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter



Issue date 2022-06-25

Version: 1.1.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com