



Philips  
do-it-yourself hair clipper

**Stainless steel blades**

14 length settings  
60mins cordless use/1h charge  
Balding attachment

**QC5550/15**

Shave your own head - even in hard-to-reach areas

with 180° rotating head

The Headgroom hair clipper is the easiest way to give yourself a precise trim or a smoothly shaven head. The unique 180° rotating attachments make it easy to reach every part of your head, for a smooth shave or trim without nicks or cuts.

**Easy to use**

- Battery light shows the battery status
- 60 minutes cordless power after 1 hour quick charge.
- 100% waterproof for easy cleaning
- 2-year guarantee, worldwide voltage.
- Comes with hand-held mirror and storage pouch

**Skin friendly performance**

- Skin-friendly, high-performance trimmer blades
- Easy to select and lock in 14 length settings - 0mm to 15mm
- Contour-following comb follows every curve of your head.
- Precision comb with 5 locking length settings - 1mm to 3mm
- Precision trimmer for fine details to perfect your style

**Do it yourself**

- 180° rotating head for easy reach
- Balding attachment for a smooth and precise shave


**PHILIPS**

# Highlights

## 14 locking length settings

Turn the wheel to simply select and lock in the length setting you want. Two adjustable combs provide length settings from 0mm to 15mm, with precisely 2mm between each length on the main comb and 0.5mm between each length on the precision comb. You can also use it without a comb for a close 0.5mm trim.

## 180° rotating head

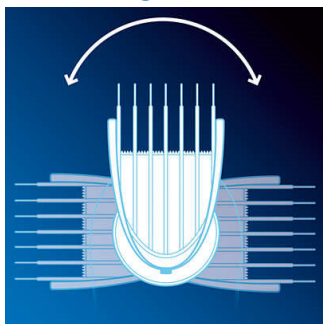

Makes trimming or shaving your own hair easier than ever. Simply select the best angle to comfortably reach all parts of your head without any assistance.

## Balder attachment(grooming)

Shave your own head easily and comfortably. Guarantees a smooth shave without nicks and cuts.

## Battery light

Battery light glows green when full and blinks orange when 10 minutes remain.

## Bonus mirror and pouch

The hand-held mirror provides better visibility when trimming or shaving the back of your head. The pouch stores the clipper and attachments safely together.

## Follows every curve

The hair clipper gently follows the contours of your head for a fast, even and comfortable haircut.

## Li-ion battery power

The powerful lithium ion battery lasts for 60 minutes after a 1 hour charge. A quick 10 minute charge gives you 10 minutes of clipping time, so it's always ready when you are.

## Precision comb (Grooming 2012)

The additional comb gives you extra length settings from 1mm to 3mm, with 0.5mm precise steps between each length.

## Precision trimmer

Perfect for getting into hard to reach areas, like around your sideburns, under your nose or around your mouth. It's designed to cut very close while still protecting your skin. And its small size makes it easy to see what you're doing - for fine lines and details.

## Skin-friendly high-performance



The steel blades of the electric shaver lightly brush against each other, so they sharpen themselves as you trim! The blades stay extra-sharp to always cut hairs neatly and effectively, but have rounded blade tips and combs to prevent skin irritation.

## Built to last

All of our grooming products are built to last. They come with a 2 year worldwide guarantee, worldwide voltage compatibility.

## 100% waterproof

To clean, you can simply rinse this Philips groomer under the tap.

# Specifications

## Cutting system

- Cutter width: 41 mm
- Number of length settings: 11
- Range of length settings: 0-15 mm
- Precision (size of steps): By 2mm mm
- Comb type: Contour following
- Balder attachment (0 mm)
- Precision comb (1 to 3 mm)
- Small comb (3 to 15 mm)

## Design

- Shape: Ergonomic

## Accessories

- Cleaning brush
- Storage pouch
- 2 guide combs
- Balder attachment
- Mirror

## Ease of use

- Zoom wheel
- Display: Charging indicator
- Adjustable guide combs
- Cleans under the tap

## Power system

- Battery type: Li-ion
- Running time: 60 minutes
- Charging time: 1 hour
- Usage: Corded/cordless

## Service

- 2-year worldwide guarantee

