



Philips StyleShaver  
waterproof styler & shaver

0.5mm precision settings  
50mins cordless use/4h charge  
Dual foil shaver

QS6140/15

## Express your style

Trim, style & shave - with one product

Create the exact look you want with Styleshaver. With just a flip of the wrist, this dual-ended electric beard trimmer and styler has everything you need to create a perfect beard style, 3-day beard, or a clean shave, even on tough beards

### Easy to use

- Battery light shows the battery status
- 2-year guarantee, worldwide voltage, no oil needed
- Foldable stand for charging and storage
- 100% waterproof for easy cleaning
- 50 minutes cordless power after 4 hour charge.

### Skin friendly performance

- Skin-friendly, high-performance trimmer blades

### Trim + style + shave

- Beard trimmer with 12 length settings from 0.5mm to 10mm
- Dual shaver with trimmer shaves even the toughest beards
- Reversible trimmer: 32mm and 15mm sides for perfect details


# PHILIPS

waterproof styler & shaver  
0.5mm precision settings 50mins cordless use/4h charge, Dual foil shaver

QS6140/15

## Highlights

### 4 hour charge

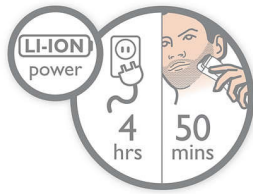

The powerful lithium ion battery lasts for 50 minutes after a 4 hour charge. A quick 10 minute charge gives you 10 minutes of grooming time, so it's always ready when you are.

### 100% waterproof



Shave or trim your beard where you want to, wet or dry. When you're done, just rinse it off under the tap.

### Beard and stubble trimmer



A full size (32mm) Philips beard and stubble trimmer with 12 adjustable length settings from 0.5mm to 10mm makes it easy to get exactly the length you want. Turn the wheel to lock-in your perfect length setting. The durable metal trimmer with skin-friendly rounded edges guarantees a precise and even trim.

### Built to last

All of our grooming products are built to last. They come with a 2 year worldwide guarantee, worldwide voltage compatibility, and they never need to be oiled.

### Dual foil shaver with trimmer



The dual foil shaver makes it easy to clean up stubble around your beard, even on your neck. The mid trimmer catches longer, tougher hairs and the 2 floating foils shave everything else perfectly smooth.

### Reversible trimmer



Take off the adjustable length comb, and there's a reversible precision trimmer underneath. One side is a 32mm high-performance trimmer. Turn it around, and there is a 15mm wide precision trimmer – perfect for getting into small spaces, like under your nose or around your mouth. It's designed to cut very close while still protecting your

skin, and it's small size and angled design make it easy to see what you are doing for fine lines and details.

### Battery light



Battery light glows light blue when full and blinks orange when 10 minutes remain.

### Charging stand



The foldable charging stand is designed to fit into even the smallest spaces, so you can charge where you want, or take it with you when you travel.

### Skin-friendly high-performance



The steel blades of the electric shaver lightly brush against each other, so they sharpen themselves as you trim! The blades stay extra-sharp to always cut hairs neatly and effectively, but have rounded blade tips and combs to prevent skin irritation.

waterproof styler & shaver  
0.5mm precision settings 50mins cordless use/4h charge, Dual foil shaver

QS6140/15

# Specifications

## Create the look you want

- Styles: Detailed styling, Short beard, Stubble look, Long beard, Moustache

## Power system

- Battery type: Li-ion
- Running time: 50 minutes
- Charging time: Quick charge, 4 hours

## Accessories

- Cleaning brush

## Design

- Handle: Rubber grip
- Color: Metallic lacquer

## Service

- 2-year guarantee

## Cutting system

- Number of length settings: 12
- Precision (size of steps): By 0.5mm mm
- Non-scratching teeth: For more comfort
- Comb type: Stubble, Beard

## Ease of use

- Zoom wheel: Easily adjust length settings
- Wet & Dry: 100 % waterproof for easy use and cleaning
- Secured length settings
- LED indicator: Charging and battery level



Issue date 2023-10-16

Version: 4.0.1

EAN: 87 10103 57710 2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)