

Philips Jewel
Vacuum cleaner with bag

2000W
Animal

FC9067/02



Beautiful results in a blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle, which gives you three cleaning actions in one stroke.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Outstanding results on carpets and furniture

- Turbo Brush nozzle removes 25% more hairs and dust

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS

Highlights

2000 Watt motor




Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Super Clean Air HEPA 12 filter



This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

Active fragrance control

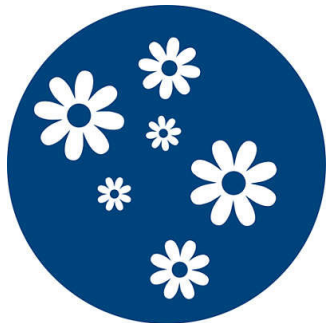

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance

control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Design

- Color: Denim blue

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s

Usability

- Cord length: 7 m
- Tube coupling: Button
- Action radius: 10 m
- Carrying handle: Front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette
- Active fragrance control

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Additional nozzle: Turbo brush
- Accessory storage: On handgrip

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air HEPA 12 filter

