

Philips Performer
Vacuum cleaner with bag

ParquetCare
RemoteControl

FC9166/01



The highest suction power ever

500 Watt suction power for effortless cleaning

The highest suction power ever, resulting in effortless cleaning: this is what the FC916x range is all about. Combined with a hygienic filter and easy dustbag removal system the FC916x range takes care of all your dust and dirt.

Superior hard-floor cleaning

- Super parquet nozzle removes 3 x more sticky dirt

Superior cleaning

- 2200 Watt motor generating max. 500 Watt suction power

Long lasting dust pickup

- s-bag in XXL 4 liter capacity for long-lasting performance

Suction power control at your fingertips

- Handy remote control to change the suction power

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

PHILIPS

Highlights

Powerful cleaning



Highly efficient 2200 Watt motor generates max. 500 Watt suction power for perfect cleaning results.

s-bag in XXL 4 liter



This large dust bag capacity allows you to make optimal use of your dust bag, which means you have to change your dust bag less frequently.

Handy remote control



Handy remote control to change the suction power with your fingertips and without bending.




Super parquet nozzle removes 3 x more sticky dirt



Super parquet nozzle removes 3 x more sticky dirt

TriActive nozzle

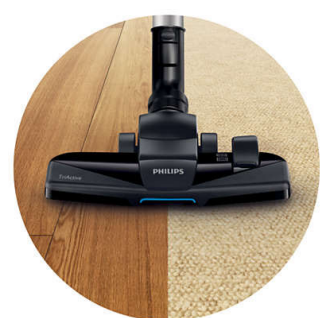

The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Ultra Clean Air HEPA 13, 99.95% filtration



Ultra Clean Air HEPA 13 filter, 99.95% filtration

Specifications

Performance

- Input power (IEC): 2000 W
- Input power (max): 2200 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 500 W
- Vacuum (max): 34 kPa
- Airflow (max): 47 l/s

Design

- Color: Translucent smoked black

Usability

- Tube coupling: Button
- Carrying handle: Top and front
- Cord length: 9 m
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on handgrip
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Weight and dimensions

- Dimensions of product (LxWxH): 500 x 320 x 280 mm
- Weight of product: 6.3 kg

Filtration

- Dust capacity: 4 L
- Dust bag type: s-bag
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com