

PHILIPS



Washable hair
clipper

Hairclipper series
9000

Self-sharpening metal blades
60 length settings
120 mins cordless use/1h charge



HC9420/15

The perfect haircut, personalized to you with Motorized Combs

The Philips Hair Clipper 9000 ensures a perfect, personalized haircut. With 400 length settings and Titanium blades, you get ultimate precision and power. Achieve the perfect finish tailored to your hair density.

Easy to use

- Memory Function Remembers Your Preferred Settings
- Auto Turbo for Effortless, Even Haircuts
- Up to 120 minutes of cordless use

Performance

- PowerAdapt sensor delivers a personalized haircut experience
- Remain as sharp as day one without oiling
- Motorized Combs Ensure Consistent Cuts Every Time

Ultimate precision and control

- 60 length settings with Motorized Buttons
- 3 adjustable hair combs to achieve your desired length

Built to last

- Up to 5-Year Global Warranty for Purchase Protection

Easy and convenient use

Hairclipper series 9000

Washable hair clipper

HC9420/15

Highlights

Digital length control



Use the Control Buttons to precisely select and lock-in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0,2mm increments between 1 and 7mm, and 1mm between 7 and 42mm. Or you can use it without the comb for a close 0.5mm trim.

Self-sharpening stainless steel blades




The self-sharpening steel blades are designed to be incredibly long-lasting. Even after 5 years they cut with the same precision and accuracy as day 1.

PowerAdapt sensor



An even haircut, personalized to you. The PowerAdapt sensor automatically adjusts the motor to match your unique hair density, providing precisely the right cutting power at any length.

Memory Function

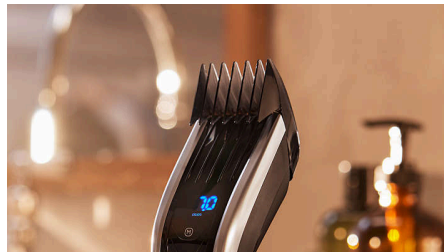

Your perfect haircut, every time. The smart hair clipper's memory function remembers your 3 preferred length settings, saving you time and hassle while achieving your ideal look.

Auto Turbo




Experience a perfectly even haircut tailored to your unique hair. With Auto Turbo, the motor speed adjusts automatically to match your hair's thickness, ensuring a smooth, even, and effortless finish.

Motorized Combs



Lock in your desired hair length with 0.1mm accuracy and effortlessly maintain it with Philips' motorized length setting system, designed for precision.

Powerful cordless use

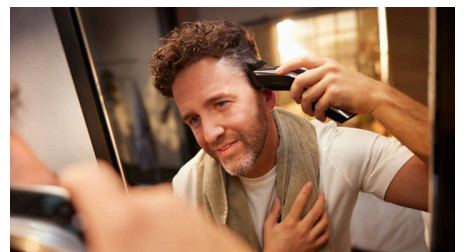

Don't get tangled up in your cordless hair clippers – a 1 hour charge provides up to 120 minutes of powerful clipping time. Or keep it plugged in for uninterrupted trimming.

Hairclipper series 9000

Washable hair clipper

HC9420/15

Highlights

Hair clipper built to last with no oil required



All of our Hair clipping products* are built to last. They come with a standard global 2 year warranty, including the option to extend up to 5 years** and they never need to be oiled.

Up to 2-year guarantee



A grooming product built to last: the warranty offers coverage for up to 5 years, including a 2-year standard global warranty, with an additional 3 years available upon registering the device within 90 days of purchase.

3 adjustable hair combs



Achieve precise clipping with our 3 adjustable hair combs. Choose from over 400 hair lengths ranging from 1mm to 42mm, or use the clipper without a comb for a close 0.5mm trim.

Hairclipper series 9000

Washable hair clipper

HC9420/15

Specifications

Power system

Motor: Auto Turbo

Battery type: Li-ion

Operation: Corded and cordless

Running time: 120 minutes

Charging time: 1 hour

Accessories

Attachments: 3 hair combs

Pouch: Travel pouch

Service

Up to 5-year guarantee

Cutting system

Cutting element: Stainless steel blades

Cutter width: 41mm

Number of length settings: 60

Range of length settings: From 0.5 to 42 mm

Precision (size of steps): 0.2mm/1mm

Length selection: Control Buttons, Motorized Combs

Ease of use

Maintenance free: No oil needed

Cleaning: Removable cutter

Memory function

