

PHILIPS

NORELCO

Wet & dry electric
shaver, Series 8000

Shaver 8800

UltraTrack heads

GyroFlex 3D contouring system

60 min shaving, 1 hr charge

Advanced touch-screen display

1290X/40



Series 8000 - Ultimate shaving experience with GyroFlex 3D system

The Philips Norelco Shaver 8800 (formerly called SensoTouch 3D) features an advanced touchscreen display and Gyroflex 3D technology for a close, comfortable shave. Shaving heads follow three specialized tracks to catch every hair.

Designed for comfort

- Contour-following shaver minimizes pressure and irritation
- Skin friendly precision trimmer
- Smooth surface glides over your skin

Advanced chrome display

- Touch-control display lets you know how much power remains

Protective seal for wet or dry shaving

- Comfortable shaving, wet or dry, thanks to the AquaTec seal

Cordless, travel-friendly design

- One-hour charge provides up to 20 days of shaving time

Innovative technology for a closer shave

- Shaver lifts hair to cut below skin level
- Shaving heads catch and trim every hair

Shaver 8800

Wet & dry electric shaver, Series 8000

1290X/40


Highlights

GyroFlex 3D



Philips Norelco's best shave yet, Series 8000 gives you the ultimate shaving experience. Its GyroFlex 3D system has three dynamic parts that move independently, flexing outward, pivoting around, and tilting inward to follow the contours of your face.

UltraTrack shaving heads

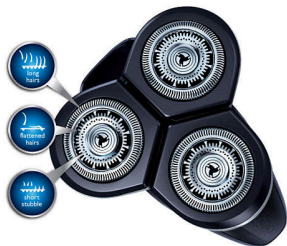

The UltraTrack shaving heads catch every hair in just a few strokes with three specialized shaving tracks: slots for long hairs, channels for longer hairs, and holes for the shortest stubble.

Super Lift and Cut action



The patented Super Lift & Cut dual blade system lifts hairs to cut comfortably below skin level for a close, even shave.

Aquatec - Wet or Dry shaving



Now you can shave any way you want. The AquaTec seal gives you the option of either a comfortable dry shave or a refreshing wet shave with shaving cream or gel.

SkinGlide shaving surface



With a low-friction SkinGlide shaving surface, the razor slides smoothly along your skin for a close shave without irritation.

Touchscreen display



Shaver 8900 has an easy-to-use touchscreen display that shows exactly how many minutes of shaving time remain before the battery needs to be recharged. You can also check whether the battery level, charging status, and the cleaning

indicator at a glance. There's even a replacement-head indicator that helps ensure every shave is a close shave.

Rechargeable



The cord-free SensoTouch 3D charges in one hour and provides up to 60 minutes (or a maximum of 20 days) of shaving time. A display lets you know how much power remains in the lithium-ion battery and when you need to replace the blades.

Precision trimmer



The unique skin friendly precision trimmer system is built to avoid unnecessary skin contact. Easy to use for perfect moustache and sideburn trimming.

Shaver 8800

Wet & dry electric shaver, Series 8000

1290X/40

Specifications

Accessories

Pouch: Luxurious pouch

Maintenance: Cleaning brush, Protective cap

Stand: Charging stand

Power

Battery type: Lithium-ion

Run time: 60 minute(s)

Stand-by power: 0.15 W

Max power consumption: 5.4 W

Automatic voltage: 100-240 V

Design

Color: Black

Finishing: Full metal frame, LED Display

Handle: Slim handle, Easy grip, Anti-slip grip

Service

Replacement head: Replace every yr with RQ12
2-year guarantee

Shaving Performance

Contour following: GyroFlex 3D contour following

SkinComfort: SkinGlide

Shaving system: UltraTrack shaving heads, Speed

XL shaving heads, DualPrecision System, Patented
Super Lift & Cut

Styling: Skin friendly precision trimmer

Ease of use

Charging: 1 hour, Rechargeable, Cordless, Quick
charge

Display: Touch screen control, Full numeric
battery indicator, Battery low indicator, Charge
indicator, Cleaning indicator, Replace shaving
heads indicator

Cleaning: Washable

Wet & Dry: Wet and dry use

Shaving time: Up to 20 days

