

Philips Marathon
Bagless vacuum cleaner

2000W

350W suction power
HEPA 12 filter
Parquet

FC9204/01



Professional cleaning

with high cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the bagless Marathon delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power in its category, and it's the quietest bagless available.

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Traps dust and allergens inside

- EPA 12 filter with 99.5% filtration of dust


Thorough cleaning results all the time

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power

PHILIPS

Highlights

Powerful and quiet motor

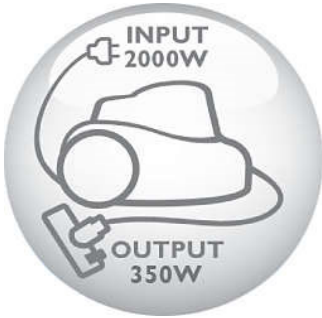

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design makes it also exceptionally quiet.

Lasting suction power

Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.

EPA 12 filter



This special outlet filter captures 99.5% of the dust before the air is blown back into your room, ensuring a clean, dust-free, environment.



Super Parquet nozzle



The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

Design

- Color: Black

Usability

- Action radius: 12 m
- Tube coupling: Button
- Cord length: 9 m
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Brush, Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Weight and dimensions

- Weight of product: 7.2 kg

Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com