

Philips Jewel  
Vacuum cleaner with bag

2000W  
Parquet

FC9066/03



## Beautiful results in a blink of an eye

### TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle, which gives you three cleaning actions in one stroke.

#### Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

#### Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

#### Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

#### Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

#### Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

# PHILIPS


# Highlights

## 2000 Watt motor



Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

## Super Clean Air HEPA 12 filter

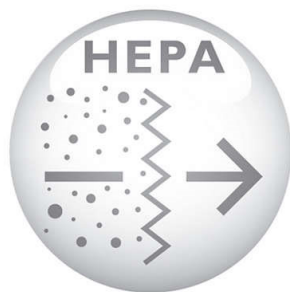

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

## Active fragrance control



To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance

control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

## Super Parquet nozzle



The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s

## Design

- Color: Denim blue

## Usability

- Action radius: 10 m
- Cord length: 7 m
- Tube coupling: Button
- Carrying handle: Front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette
- Active fragrance control

## Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

## Weight and dimensions

- Weight of product: 5.7 kg

## Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air HEPA 12 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)