

Philips Marathon  
Bagless vacuum cleaner

**2000W**

350W suction power  
HEPA 13 washable filter

**FC9210/01**



## Professional cleaning

High cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the Marathon bagless vacuum cleaner delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power in its category.

### **Highly efficient anti-allergy system**

- HEPA AirSeal plus HEPA 13 filter

### **Easy cleaning, even around furniture**

- TriActive nozzle with unique 3-in-1 action

### **Extra long reach for convenient cleaning**

- More cleaning with less effort

### **Thorough cleaning results all the time**

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power


### **Filter cleaning system**

- Cleaning the filter manually

# PHILIPS

# Highlights

## Powerful and quiet motor

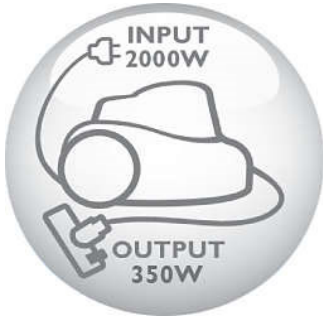

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design makes it also exceptionally quiet.

## Lasting suction power

Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.


## HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through

the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

## 10 m action radius

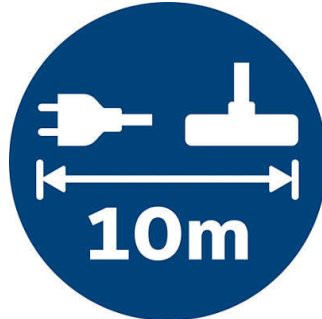

10 m action radius for cleaning with less effort.

## Manual filter cleaning

Cleaning the filter manually

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Design

- Color: Black

## Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

## Usability

- Tube coupling: Button
- Cord length: 7 m
- Action radius: 10 m
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

## Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip

## Weight and dimensions

- Weight of product: 7.2 kg

## Filtration

- Dust capacity: 2 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- HEPA AirSeal

