

Philips StudioPower
Vacuum cleaner with bag

2000W
AirflowMax technology

FC9080/01



The great little performer

Big in power, compact in size

The StudioPower from Philips combines the performance of a big vacuum cleaner with the compactness of a small one. Its big power, small size, 2 handles, and large reach offer great flexibility, so you can quickly move through your home.

Excellent cleaning results

- 2000 Watt motor generating max. 400 Watt suction power

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Easy to use all over the house

- Two comfortable carrying handles for extra convenience


Big reach

- An extra big 11 m reach

PHILIPS


Highlights

2000 Watt motor

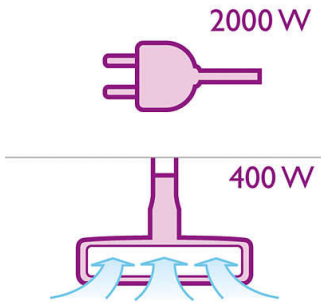


This powerful 2000 Watt motor generates max. 400 Watt suction power for excellent cleaning results.

Comfortable carrying handles

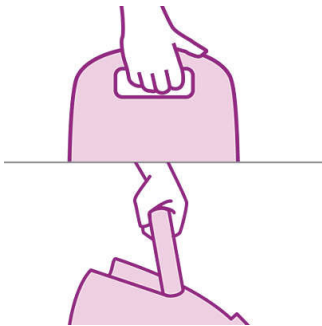

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

HEPA AirSeal, HEPA 13 filter

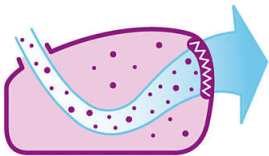


HEPA AirSeal & HEPA 13 filter

This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through

the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

11 m reach

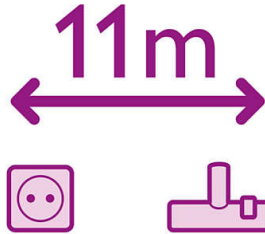

Thanks to its 8 m cord you have an 11 m reach without having to switch the plug.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool
- Accessory storage: On tubeclip

Design

- Color: Mystic blue

Weight and dimensions

- Dimensions of product (LxWxH): 450 x 240 x 240 mm
- Weight of product: 6 kg

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- HEPA Air Seal

Usability

- Action radius: 11 m
- Cord length: 8 m
- Tube coupling: Button
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette



Issue date 2023-08-12

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com