

Philips StudioPower
Vacuum cleaner with bag

2000W

AirflowMax technology
Parquet

FC9083/01



The great little performer

Big in power, compact in size

The StudioPower from Philips combines the performance of a big vacuum cleaner with the compactness of a small one. Its big power, small size, 2 handles, and large reach offer great flexibility, so you can quickly move through your home.

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch-protection

Excellent cleaning results

- 2000 Watt motor generating max. 400 Watt suction power

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action


Easy to use all over the house

- Two comfortable carrying handles for extra convenience

PHILIPS


Highlights

2000 Watt motor

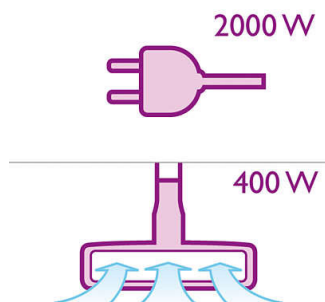


This powerful 2000 Watt motor generates max. 400 Watt suction power for excellent cleaning results.

Comfortable carrying handles

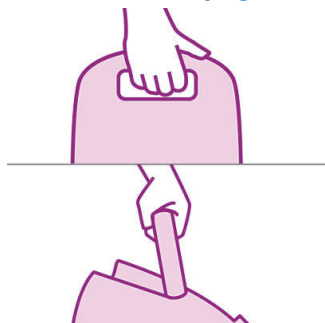

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.


HEPA AirSeal, HEPA 13 filter

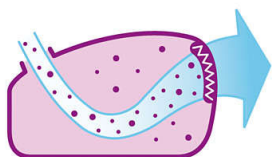

HEPA AirSeal & HEPA 13 filter


This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Parquet nozzle

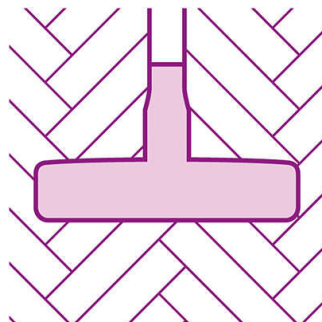

No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

11 m reach

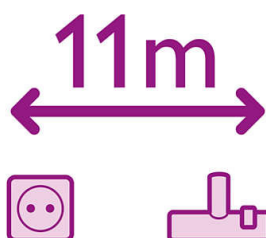

Thanks to its 8 m cord you have an 11 m reach without having to switch the plug.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s

Design

- Color: Pistel red

Usability

- Tube coupling: Button
- Cord length: 8 m
- Action radius: 11 m
- Carrying handle: Top and front
- Tube type: Metal 2-piece telescopic tube
- Power control: Electronic on appliance
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette

Nozzles and accessories

- Accessories included: Crevice tool
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip
- Additional nozzle: Parquet nozzle

Weight and dimensions

- Dimensions of product (LxWxH): 450 x 240 x 240 mm
- Weight of product: 6 kg

Filtration

- Dust capacity: 3 L
- Dust bag type: s-bag
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- HEPA Air Seal



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com