



**Saeco Intelia Evo
Super-automatic
espresso machine**

- Automatic Milk Frother
- Stainless steel

HD8752/03

One touch espresso and milk froth

With Saeco's ultimate cappuccinatore

Only the Saeco Intelia super-automatic espresso machine offers you the perfect Espresso experience, easy to use, easy to customize, easy to clean. Prepare a tasty Espresso or creamy milk froth with just a touch of a button.

Authentic Italian coffee perfection

- Coffee without burnt taste thanks to 100% ceramic grinders
- Delicious milk froth thanks to the automatic milk frother
- Coffee without waiting thanks to the quick heat boiler

Ease of cleaning and maintaining

- Always a clean machine thanks to auto-clean and descaling
- Easy cleaning thanks to removable brewing group

Ease of cleaning and maintaining

- Easy cleaning thanks to dishwasher-safe parts

Set the beverages to suit your taste

- Save your favorite coffee settings
- Avoid heat loss and fit every cup with our adjustable spout
- Play with the coffee's richness with our adjustable grinders

 **Saeco**



Highlights

100% ceramic grinders



This espresso machine is equipped 100% ceramic grinders. Saeco uses ceramic grinders because of their consistent grind without overheating the coffee bean for an impeccable espresso. Ceramic also ensures long-lasting performance and a totally silent operation.

Quick heat boiler



The Saeco quick heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Saves your coffee settings



You will always get a perfect cup of espresso brewed just for you, according to your

personal preference, thanks to our innovative memo function to adjust the coffee length, strength and temperature. Enjoy a superb coffee drink in your favorite cup with just the press of a button.

Adjustable spout



The adjustable spout on our espresso machines will fit every cup and thus prevents the coffee splashing or cooling down while pouring in your cup. This way your espresso is always served at the right temperature while maintaining a clean machine.

Dishwasher-safe parts




For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic cleaning.

5 step adjustable grinders



Different coffee blends require different levels of granularity for the full flavor to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full bodied espresso, to the coarsest, for a lighter coffee.

Removable brewing group

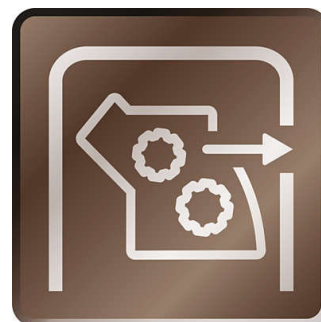

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easily cleaning by rinsing under the tap ensuring maximum hygiene.

Specifications

Easy to use

- Cleaning and maintenance: Automatic coffee circuit rinse, Descaling cycle
- Usage: Adjustable coffee dispenser, Cup holding surface, Rapid steam, Removable brewing group, Normal / long espresso option

Weight and dimensions

- Product dimensions (L x D x H): 256 x 440 x 340 mm
- Coffee bean capacity: 300 g
- Product weight: 8.9 kg
- Waste container capacity: 10 servings
- Maximum cup height: 130 mm
- Water tank capacity: 1.5 L

Technical specifications

- Supported coffee types: Whole coffee beans, Ground coffee
- Cord length: 80 cm
- Power: 1900 W
- Boiler material: Stainless steel (Inox)
- Country of origin: Designed in Italy, Made in Europe

- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

Features

- Cappuccinatore
- Brita Filter compatible: Optionable, Yes
- Hot water / Steam Nozzle
- Simultaneous brewing

Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

Design

- Colour: Metal front/black plastic lateral
- Materials and finishing: Stainless Steel/Plastic

Service

- 2-year worldwide guarantee

Energy saving

- Energy saving: Automatic stand-by