

Saeco Odea  
Super-automatic  
espresso machine

- Automatic Milk Frother
- Silver

RI9757/01



Espresso in a trendy and functional design

Odea standard line

Odea standard line

**Authentic Italian coffee perfection**

- Delicious milk froth thanks to the classic milk frother
- Coffee without waiting thanks to the quick heat boiler
- Every bean ground perfectly with our metal grinders

**Ease of cleaning and maintaining**

- Always a clean machine thanks to automatic circuit cleaning
- Easy cleaning thanks to removable brewing group

**Set the beverages to suit your taste**

- Save your favorite coffee length and strength

**Set the beverages to suit your taste**

- Play with the coffee's richness with our adjustable grinders

 **Saeco**



# Highlights

## Automatic circuit cleaning



Saeco designed this espresso machine to automatically clean its coffee circuit with water upon starting up or switching off of the machine, this delivers a great, fresh taste with each cup of coffee.

## Quick heat boiler



The Saeco quick heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

## Classic milk frother



This Saeco espresso machine comes with the classic milk frother that baristas call a

"Pannarello". It dispenses steam and is immersed in milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialties the traditional way!

## Metal grinders



Our metal grinders always guarantee impeccable grinding.

## Saves coffee length & strength




You will always get a perfect cup of espresso brewed according to your personal preference, thanks to our memo function which allows you to adjust the coffee length and strength to suit your taste. Enjoy a superb coffee drink in your favorite cup with just the press of a button.

## 5 step adjustable grinders



Different coffee blends require different levels of granularity for the full flavor to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full bodied espresso, to the coarsest, for a lighter coffee.

## Removable brewing group

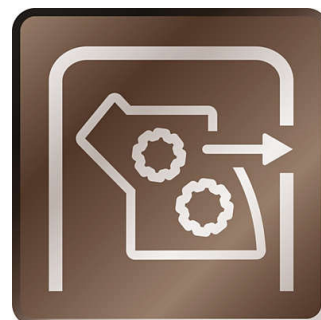

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easily cleaning by rinsing under the tap ensuring maximum hygiene.

# Specifications

## Weight and dimensions

- Product dimensions (L x D x H): 292 x 381 x 368 mm
- Coffee bean capacity: 180 g
- Product weight: 8.5 kg
- Waste container capacity: 14 servings
- Water tank capacity: 1.5 L

## Technical specifications

- Cord length: 80 cm
- Supported coffee types: Whole coffee beans
- Power: 1400 W
- Boiler material: Stainless steel (Inox)
- Voltage: 230 V
- Frequency: 50 Hz
- Country of origin: Made in Europe, Designed in Italy

- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

## Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

## Service

- 2-year worldwide guarantee

## Technical data

- Power: 1400 W
- Voltage: 230 V
- Frequency: 50 Hz
- Pump Pressure: 15 bar