

Philips PerformerPro
Vacuum cleaner with bag

2200W
HEPA 13 filter
5L
Super Parquet

FC9192/61



Highest suction power, even as the bag fills up*

with AirflowMax technology

With its powerful 1800W motor and AirflowMax technology, Philips PerformerPro vacuum cleaner maintains high airflow, giving you the highest suction power. For great cleaning results, even as the bag fills up!*

Convenience

- 360Flex hose swivel for smooth maneuvering
- Extra long grip with air slide for farther reach
- SmartLock coupling to easily adjust to each cleaning task
- Long reach for convenient cleaning

Excellent cleaning results

- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust
- 2200 Watt motor generating max. 500W suction power
- Revolutionary Airflow Max technology for extreme suction
- 5L dust capacity for longer cleaning

Integrated Anti-Allergy system

- Allergy friendly quality tested by ECARF
- s-bag Ultra Long Performance captures even more fine dust
- HEPA AirSeal with HEPA 13 filter retains 99.99% of dust

PHILIPS

Highlights

360Flex hose swivel

The Philips 360Flex hose swivel offers full 360 degrees of rotation of the hose for smooth maneuvering of the vacuum cleaner around your house.

Extra long grip with air slide


This ergonomically shaped grip is convenient to use. Its extra long design gives you farther reach, so you can easily clean hard to reach places. The air slider allows you to adjust the suction power without having to bend down.

SmartLock coupling



The unique Philips SmartLock coupling on nozzles and the telescopic tube easily connects, and disconnects, these parts during cleaning. The SmartLock coupling intuitively allows you to adjust the telescopic tube to your preferred height.

Long reach

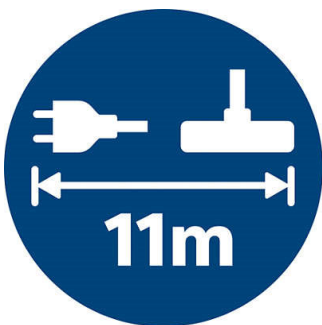

11 m reach allows you to clean a larger surface without having to switch the plug.

TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

s-bag Ultra Long Performance



The Philips s-bag Ultra Long Performance made of five layers of high quality, non-clogging material captures even the finest dust. This excellent filtration gives you a better cleaning result and clean air in your home. The multilayer filtration also maintains the vacuum cleaners high suction power during the entire lifetime of the bag. The s-bag ULP has been tested and certified by the independent test institute TÜV Rheinland Group, proven to last up to 80% longer than a standard dustbag.

Airflow Max technology



Airflow Max technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get the highest suction power, even as the bag fills-up!

HEPA AirSeal with HEPA 13



HEPA 13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.

5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

Specifications

Performance

- Input power (IEC): 1800 W
- Noise level (Lc IEC): 79 dB
- Suction power (max): 500 W
- Vacuum (max): 36 kPa
- Airflow (max): 51 l/s

Design

- Color: Full red

Usability

- Action radius: 11 m
- Tube coupling: SmartLock
- Cord length: 8 m
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Handgrip: Ergonomic grip with air slider
- Wheel type: Rubber
- Dust full indicator
- Park or storage assist: Vertical and horizontal

Nozzles and accessories

- Standard nozzle: TriActive+ nozzle
- Accessories included: Crevice tool, 2-in-1 brush/small nozzle
- Additional nozzle: Super Parquet nozzle
- Accessory storage: On tubeclip

Weight and dimensions

- Dimensions of product (LxWxH): 500 x 310 x 300 mm
- Weight of product: 5.0 kg

Filtration

- Dust capacity: 5 L
- Dust bag type: s-bag Ultra Long Performance
- Exhaust filter: Ultra Clean Air HEPA 13 filter
- Motor filter: Triple layer
- HEPA Air Seal



Issue date 2023-04-14

Version: 1.1.2

EAN: 87 10103 65543 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Suction power tested in accordance with international standard IEC 60312-1, tested by external test institute SLG Prüf- und Zertifizierungs GmbH (Philips Consumer LifeStyle B.V., August 2012)