

Philips PowerPro Compact  
Bagless vacuum cleaner

**1700W**

PowerCyclone 4  
EPA 10 motor filter

**FC8471/61**



## Higher suction power\* for a better clean

### With PowerCyclone 4 Technology

The new Philips PowerPro Compact delivers powerful performance without compromises thanks to the PowerCyclone 4 technology and advanced bucket design

#### **Easy to clean**

- Advanced dust container design for easy to emptying

#### **Clean air in your home**

- The EPA filter catches microscopic vermin causing allergy

#### **Ergonomic grip for far reach**

- Reach all corners thanks to the extra long ergonomic grip

#### **Powerful cleaning performance**

- PowerCyclone 4 technology separates dust and air in one go
- 1700 Watt motor generating 330 Watt suction power

# PHILIPS

# Highlights

## PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

## 1700 Watt motor generating 330 Watt suction power



1700 Watt motor generating 330 Watt suction power

## EPA filter system




The pleated EPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

## Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## Easy to empty dust container

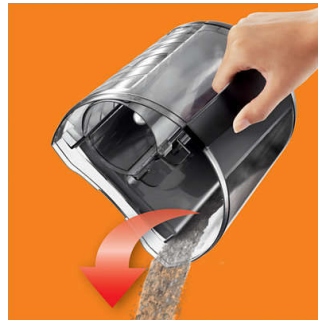

The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

# Specifications

## Performance

- Input power (max): 1700 W
- Input power (IEC): 1400 W
- Noise level (Lc IEC): 84 dB
- Suction power (max): 330 W
- Vacuum (max): 25 kPa
- Airflow (max): 35 l/s

## Design

- Color: Star blue

## Usability

- Tube coupling: Conical
- Action radius: 9 m
- Cord length: 6 m
- Carrying handle: Front
- Tube type: Fixed 2-piece metal tube
- Wheel type: Plastic

## Nozzles and accessories

- Standard nozzle: Multi-purpose nozzle
- Accessories included: Crevice tool, Small nozzle

## Weight and dimensions

- Dimensions of product (LxWxH): 406x285x238 mm
- Weight of product: 4.5 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Sponge
- Motor filter: Washable foam inlet filter



Issue date 2023-04-14

Version: 1.1.2

EAN: 87 10103 65301 1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Suction power tested in accordance with international standard DIN EN 60312/11/2008, tested by external test institute SLG Prüf- und zertifizierungs GmbH (Philips Consumer Lifestyle B.V., January 2013).