

Philips 7300 series
Pressurised steam
generator

GC7320



Faster ironing - from start to finish

Pressurised steam power with fast-fill water tank

Created to speed up ironing from start to finish, the GC7320 is ready to use in 2 minutes. Pressurised steam power speeds up ironing by penetrating deeper into fabric and the extra-large water-filling funnel allows fast and easy refills anytime.

Fast and powerful ironing

- Up to 4.5 bars of steam pressure for fast ironing
- Constant steam up to 110 g/min for fast crease removal

Easy to use

- Start quickly: less than 2 minutes start-up time

Comfortable ironing

- SteamGlide soleplate is Philips premium soleplate
- Lightweight iron for effortless ironing

PHILIPS

Specifications

Calc management

- Calc clean solution: Easy rinsing
- Suitable for tap water

Technical specifications

- Weight of iron + base: 4.5 kg
- Weight of iron: 1.2 kg
- Product dimensions: 42.9 x 40 x 42.6 cm
- voltage: 220 - 240 V

Easy to use

- Water tank capacity: 1000 ml
- Refill any time
- Filling and emptying water: Extra-large filling hole
- Heat-up time: 2 min
- Cord freedom (swivel): 180 degree cord freedom

- Power cord length: 1.8 m
- Hose length: 1.7 m
- Hose storage: Hose clip

Sustainability

- Energy saving: 20% energy reduction

Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 110 g/min
- Power: 2400 W
- Steam output
- Pressure: Up to 4.5
- Vertical steaming
- Steam tip

Highlights

Lightweight


The iron is only 1.2 kg making ironing easy and effortless.

SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Quick start: < 2 minutes

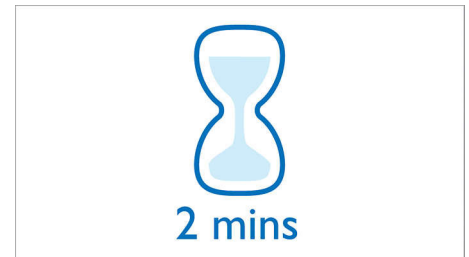

This system iron is ready to use in less than 2 minutes.

Constant steam up to 110 g/min

Constant steam up to 110 g/min helps to efficiently remove all creases.

Up to 4.5 bar



Double your ironing speed with pressurised steam. Pressurised steam penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.



Issue date 2024-03-04

Version: 1.0.1

EAN: 87 10103 42778 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com