




Saeco Moltio
Super-automatic
espresso machine

- 6 Beverages
- Integrated milk carafe
- Titanium

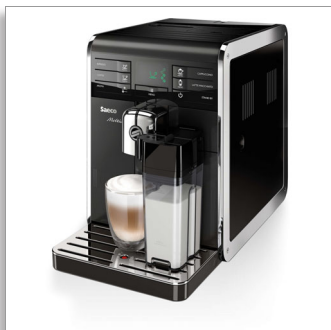

HD8869/47

Every moment deserves its coffee flavor

Acclaimed machine, serving amazing coffee quality

Recognized and respected by consumer testing, Moltio satisfies people with a taste for a robust, high-capacity machine that delivers recognized coffee quality.

Any coffee for any moment

- Enjoy 6 beverages at your fingertips
- One-touch Cappuccino and Latte Macchiato with milk carafe
- Adjust and store your personal user profile

Any coffee for any moment

- Adjust the length, 5 aroma strength and 5 grinder settings

Attentive and anticipating at your command

- Smartly designed to fit any kitchen countertop
- Clean milk residues after every use with milk clean function

Attentive and anticipating at your command

- Enjoy a great coffee with Auto-Rinse & guided descaling

Every coffee crafted to perfection

- Hot coffee from the first cup with Thermoblock
- Premium Anthracite finishing, shaped to precision

 **Saeco**

Highlights

100% ceramic grinders



Our grinders are made of high-tech ceramic: exceptionally hard and precise. Fresh beans are gently ground, without risk of overheating: extracting all the best flavors and aroma, delivering a superior coffee taste for at least 20,000 cups.

6 beverages



Enjoy a wide variety of drinks to suit any occasion. Whether you crave for an espresso, a coffee or a milk based recipe, your Super-automatic machine delivers a perfect in-cup result with no hassle and in no time!

Auto-Rinse & Guided descaling



This espresso machine automatically cleans its coffee circuit with water upon starting up or


switching off of the machine, this delivers a great, fresh taste with each cup of coffee. Regular descaling prolongs your espresso machine's life. This machine will prompt when descaling is needed. It will guide you with on-screen messages what you have to do and when.

Customize your coffees



This Super-Automatic machine offers an abundance of indulgent options to customize your beverage to your taste. You can easily personalize and memorize length, strength and temperature for each drink. Feel free to explore, experiment and dream up any drink!

Front loading for easy access

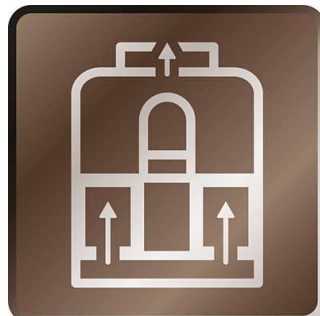

Your super-automatic espresso machine is effortless to use thanks to the frontal loading of the water tank and the dump box.

Integrated milk carafe



Enjoy super creamy cappuccino and Latte Macchiato at the perfect temperature, in the easiest way possible. Simply pour milk into the carafe, plug it into the machine, and select your preferred beverage. Whether it's a cappuccino or frothed milk, your drink will be served within seconds, with a splash-free flow at the ideal temperature.

Latte Perfetto Technology



Every coffee you prepare will be topped with a silky, milk layer that beckons the taste buds. The milk carafe froths the milk twice, then pours a splash free creamy layer into your cup at just the right temperature. The carafe can also be stored conveniently in the fridge and it is incredibly hygienic.

Premium Anthracite finishing

Every minute detail of this machine was designed and crafted to the highest quality. The Premium Anthracite finishing, inspired by Italian design and craftsmanship will stand the test of time in any classic or modern kitchen. An elegant vision of pure design, your machine will look as refined as the coffee it makes.

Specifications

Variety

- Beverages: Cappuccino, Coffee, Espresso, Espresso Lungo, Hot water, Latte Macchiato, Milk froth
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Gusto perfetto
- Auto-Rinse & Guided descaling
- Main Switch ON / OFF button: No
- Quick Heat Boiler

Technical specifications

- Voltage: 120 V
- Cord length: >100 cm
- Frequency: 50 Hz
- Country of origin: Romania

- Capacity milk carafe: 0.5 L
- Capacity waste container: 15 servings
- Capacity water tank: 1.9 L
- Coffee bean capacity: 250 g
- Weight of product: 8.5 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: Brita Intenza
- Max. cup height: 142 mm
- Color & Finishing: Black
- Product dimensions: 256 x 350 x 470 mm

General specifications

- Milk Solution: Classic Milk Frother, Integrated Milk Carafe
- User Interface: Basic Display

Service

- 1-year guarantee



Issue date 2023-08-19

Version: 1.1.2

UPC: 0 75020 05114 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com