

# PHILIPS

## AVENT

DECT Baby Monitor

Audio Monitors

100% private connection

Night light and lullabies

Talkback function

SCD505/01



## The most reliable connection to your baby

Complete peace of mind whilst your baby sleeps

Our Avent DECT Baby Monitors give you the reassurance of feeling close to your baby, even when you are not in the same room. The most reliable connection with crystal clear sound, a soothing nightlight and lullabies for you and your baby.

### Reliable technology

- DECT technology guarantees zero interference and 100% privacy
- Perfect clear sound thanks to DECT Technology

### Constant Reassurance and Secure Connection

- Energy saving ECO mode
- Always know when your monitor is in range and connected
- Sound-level lights indicate if the baby makes a noise

### Freedom and flexibility

- Range up to 330 metres\*
- Superior operating time up to 24 hours
- Rechargeable parent unit

### Comforting and soothing your baby

- Stay connected with talk back
- Calming and soothing

# Highlights

## Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting products like other baby monitors, cordless phones and mobile phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

## Perfect clear sound



Hear every tiny giggle, gurgle and hiccup with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby all the time.

## ECO mode




Switch on the ECO mode to reduce transmission power in the baby's room. In ECO mode, the units only connect when the baby makes a sound.

## Sound activation 5 LED lights



Lights are activated to indicate the level of sound in your baby's room, even when the Parent Unit is muted.

## Always connected

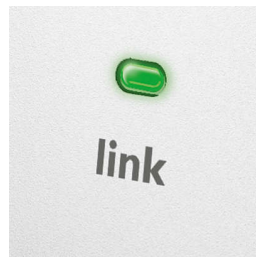

The parent unit will alert you when your monitor is out of range or when the power is low, helping you to make sure that you are always connected to your baby.

## 330 m Range



Indoor range up to 50 metres\*. Outdoor range up to 330 metres\*.

## Rechargeable parent unit



The rechargeable parent unit enables you to move in and around the home.

## Operating time up to 24 hours

The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 24 hours. However, this depends on the type of batteries used and how often and how long you use the parent unit powered by the batteries.

## Calming and soothing

Help soothe your baby to sleep with the warm tranquil glow of the night light and soft lullabies.

## Talk back function



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature, you can connect with your baby from anywhere around the home.

# Specifications

## Development stages

Stage: Pregnancy, 0–6 months

## Features

Comforting night light  
Indoor range up to: 50 m  
Outdoor range up to: 330 metres  
Talkback function

## Power

Operating time on battery hour: 24 hours  
Charging time: 8 hour(s)  
Power Supply: 120 V (US), 220–240 V

## Tuner/Reception/Transmission

Frequency band: DECT  
Automatic channel selection

## Convenience

Battery low indication  
Auto out-of-range warning  
Battery charging indication  
Volume control  
Sound-level lights

## Tuner/Reception/Transmission

Number of channels: 120

## Accessories

User manual  
AC/DC adapter  
Batteries  
Neck cord  
Charging base for parent unit: No  
Quick start guide

## Convenience

Sensitivity control

## Technical specifications

Storage temperature range: 10–40 °C  
Operating temperature range °C: 10 – 40 °C

## Logistic data

F-box dimensions (W x H x D): 220 x 156 x 94 mm

## Features

DECT Technology  
Energy-saving Smart ECO mode: ECO mode  
Lullabies  
Sound activation lights: 5 LED lights  
Volume control and sound activation

