

PHILIPS

Special Edition Poe Men's
Electric Shaver

Shaver series 5000

Poe inspired shaver

V-Track PRO Precision
Blades

8-directional flex heads

20% more power with Turbo+
mode

SW6700/14

 Product Picture

Powerful shave, excellent comfort and closeness

Feel the force of V-Track Pro!

Join the resistance against pulling with V-Track PRO to battle even longer hair. Our V-Track PRO has 72 self-sharpening V-shaped blades to cut hair with less pulling, even on 3 day stubble.

Easy to use

- 60 min Cordless Shaving once fully charged
- 1 hour charging time
- Shaver can be rinsed clean under the tap
- 2 year guarantee, worldwide voltage and replaceable blades

Designed for perfection

- Heads flex in 8 different directions for a superb result
- V-track Precision PRO for our best shave on 3 day stubble
- 72 rotating blades capture and cut hair from all angles

A comfortable and close end result

- Shave through dense parts of beard with 20% more power
- Get a comfortable dry or refreshing wet shave with Aquatec

Get the most out of your shaver

- Click-on trimmer for perfect moustache and sideburn trimming

Highlights

V-Track Precision PRO Blades



Get the perfect close shave. The V-Track Precision PRO Blades gently position each hair in the best cutting position on 3 day stubble, even flat-lying hairs and hairs of different lengths. Cuts 30% closer in fewer strokes, leaving your skin in great condition.

72 self-sharpening blades



72 self-sharpening blades. 151,000 cuts per minute. Zero hairs left standing—no matter which direction they're growing in.

8 direction ContourDetect Heads




Follow every contour of your face and neck with 8 directional ContourDetect heads. You'll catch 20% more hairs with every pass, resulting in an extremely close, smooth shave.

Turbo+ mode




Shave even faster through dense parts of your beard with the 20% extra power boost you get by activating Turbo+ mode.

Aquatec Wet & Dry

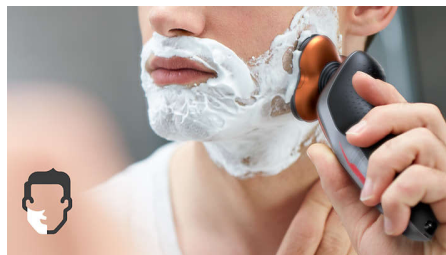

Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

60 min Cordless Shaving

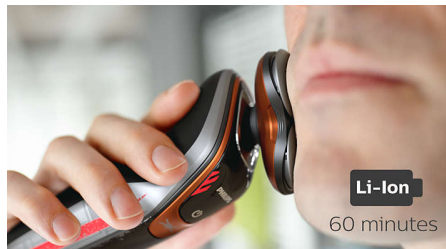


You'll have 60 minutes of running time – that's about 20 shaves – on a one-hour charge. This shaver only operates in cordless mode.

1 hour charging time



Shave longer with every charge, thanks to our powerful energy-efficient, long-lasting lithium-ion battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

Fully washable shaver

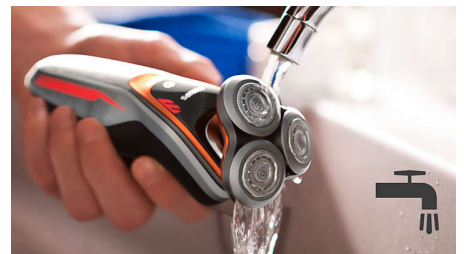

Simply open the shaver head to rinse it thoroughly under the tap.

SmartClick precision trimmer



Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your moustache and trimming your sideburns.

Specifications

Accessories

SmartClick: Precision trimmer
Pouch: Travel pouch

Power

Run time: 60 min (20 shaves)
Battery Type: Lithium-ion
Charging: 1 hour full charge, Quick charge 5 min for 1 shave
Automatic voltage: 100-240 V
Stand-by power: 0.1 W
Max power consumption: 9 W

Design

Colour: Star Wars Rebellion
Handle: Ergonomic grip and handling

Service

Replacement head: Replace every 2 yrs with SH90
2 year guarantee

Shaving Performance

Contour following: 8 direction ContourDetect Heads
SkinComfort: SkinProtection System, Aquatec

Wet and Dry
Shaving system: V-Track Precision PRO Blades, 72 self-sharpening blades
Turbo+ mode: Shave with 20% extra power

Ease of use

Cleaning: Fully washable
Wet and Dry: Wet and dry use
Operation: Cordless use, Unplug before use



* Cut 30% closer in fewer strokes - vs. Philips predecessor
* Cuts up to 20% more hair - vs. Philips predecessor
* 20% more power - compared to not using Turbo+ mode