

Philips SilentStar
Vacuum cleaner with bag

Eco

SilentSeal nozzle
HEPA 13 washable filter
Parquet

FC9304/01



The power of silence

Tough on dust, gentle on your ears

Enjoy a relaxing, undisturbed home life with Philips SilentStar vacuum cleaner. With its unique SilentSeal nozzle, this vacuum cleaner delivers powerful cleaning performance with minimal noise.

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch-protection

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy to use all over the house

- Two comfortable carrying handles for extra convenience

Low power consumption, high-power results

- 1250 Watt HD motor delivering 2000 Watt performance*


Minimum noise, maximum suction

- Optimal performance & low noise due to the SilentSeal nozzle
- Aerodynamic air channel reduces noise to a quiet 70 dB

PHILIPS


Highlights

SilentSeal nozzle

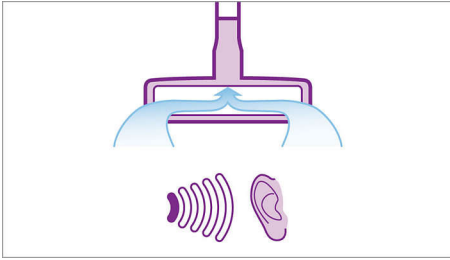


The SilentSeal nozzle contributes to an optimal performance in both low noise and dust and fluff pick up. It is optimally sealed for efficient airflow resulting in best cleaning performance - made by WesselWerk.

Aerodynamic air channel

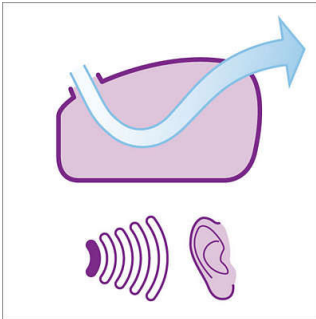

The air channel has been finetuned to make sure the air slides a smooth way out that minimizes noise creation. Additionally a special motor suspension reduces vibrations.

New 1250 Watt HD motor

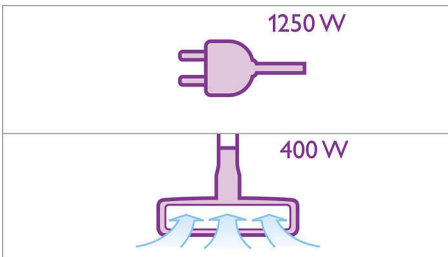


Highly efficient 1250 Watt HD (High Density) motor generates max. 400 Watt suction power, which means that it uses 30% less energy with the same cleaning result as a 2000 Watt appliance.*

HEPA AirSeal, HEPA 13 filter




This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Parquet nozzle

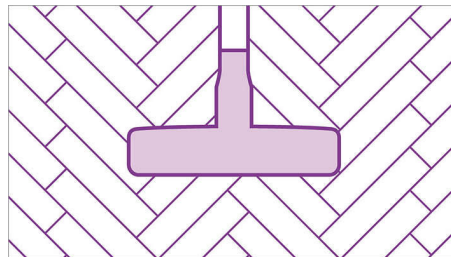

No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

Comfortable carrying handles

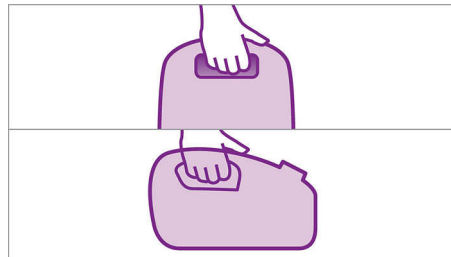

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

Specifications

Nozzles and accessories

- Standard nozzle: Low noise SilentSeal nozzle
- Accessories included: Brush, Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Parquet nozzle

Design

- Color: Dark aubergine

Weight and dimensions

- Dimensions of product (LxWxH): 500 x 290 x 250 mm
- Weight of product: 6.8 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Performance

- Input power (max): 1250 W
- Input power (IEC): 1250 W
- Noise level (Lc IEC): 70 dB
- Suction power (max): 400 W
- Vacuum (max): 32 kPa
- Airflow (max): 42 l/s

Filtration

- Dust bag type: s-bag
- Dust capacity: 3.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- HEPA Air Seal

Usability

- Cord length: 8 m
- Action radius: 11 m
- Tube coupling: Button
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette



Issue date 2023-08-07

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Philips internal measurement; 2010.