

# PHILIPS

## Glam Shine Curler

### StyleCare

13mm - 25mm conical barrel

Ionic Care

Titanium enriched barrel

Curl Ready Indicator



BHB872



## Vibrant curls and waves that shine

Introducing Glam Shine Curler. Our first curler with ionic care and titanium enriched barrel for gorgeously shiny curls and waves. Unique Curl Ready Indicator helps you create consistent curls all around and protects from overheating.

### Ease of use

- Longer barrel for long or thick hair
- Fast heat up time, ready to use in 45 sec
- Key-lock function to avoid unintentional switching
- Safety stand for ease of use
- Swivel cord to prevent tangled wires
- 1.8 m power cord
- Worldwide voltage for getting the perfect travel companion

### Beautifully styled hair


- Up to 210°C for perfect results
- Ionic care for shiny, frizz-free hair
- Titanium enriched barrel for perfect results

### Less hair damage

- 9 digital temperature settings for absolute control
- Unique Curl Ready Indicator prevents hair overheating

# Highlights

## Ionic Care

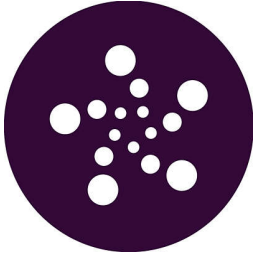

Charged negative ions eliminate static, condition the hair and smooth down the hair cuticles to intensify the hair's shine and glossiness. The result is smooth, frizz-free hair with vibrant shine.

## Titanium enriched barrel



Titanium, used professionally, is valued for its robustness and quick heat transfer resulting in better styling performance. The barrel is enriched with titanium for perfect results.

## Curl Ready Indicator



Unique Curl Ready Indicator lets you know when your curl is ready by giving a "beep" signal. This innovative feature helps you get beautiful curls and waves while helping prevent hair overheating. You can always style without using it if you prefer other styling times.

## Up to 210°C



High temperature enables you to change the shape of your hair and get the curly look you want.

## Digital temperature settings

Digital display with 9 temperature settings gives you absolute control to adjust temperature to your hair type for damage prevention.

## Longer barrel



This curler has long barrel of 160mm, ideal for curling long or thick hair.

## Safety stand



The safety stand enables you to put the curler down safely during use

## Fast heat up time



This styler has a fast heat up time, being ready to use in 45 seconds.

## Key-lock function




You are always in control. No more accidental temperature change with the key-lock function.

## Swivel cord



Useful swivel cord technology rotates the cord to prevent tangled wires.

## 1.8 m cord

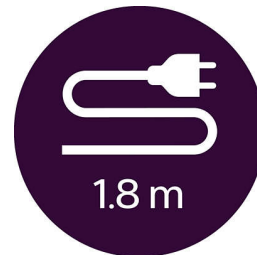

Convenient to use thanks to the 1.8m power cord length.

# Specifications

## Technical specifications

**Cord length:** 1.8 m  
**Voltage:** Worldwide V  
**Heat-up time:** 45 sec  
**Barrel coating:** Titanium Ceramic  
**Barrel size:** 13-25mm  
**Number of heat settings:** 9  
**Temperature range:** 130 °C - 210 °C  
**Type of temperature control:** LCD

## Features

**Auto shut-off:** after 60 min  
**Key lock**  
**Swivel cord**  
**Resting stand**

## Service

**2-year worldwide guarantee**

## Consumer Trade Item

**Height:** 44  
**Width:** 10.5  
**Length:** 5.5

**Net Weight:** .382  
**Gross Weight:** .523  
**GTIN:** 08710103782445  
**Country of origin:** CN  
**Harmonized system code:** 851632

## Outer Carton

**Height:** 18.2  
**Width:** 22.3  
**Length:** 46  
**Gross Weight:** 3.431  
**GTIN:** 18710103782442

