

# PHILIPS



Wet and Dry electric shaver

Shaver series 9000

Pressure Guard sensor

Dual SteelPrecision blades

Dermatologically tested

360 D Flexing heads



S9986/63

## Superior closeness\*, personalised skin comfort with SkinIQ Technology

The most intelligent shaver powered by A.I gives you incredible skin comfort. Get feedback on shaving pressure to protect your skin, while cutting hair closer, even on 5-day beards. It senses, guides and adapts to your unique face.

### A close shave

- Advanced precision for a closer shave\*
- Smooth gliding for better skin protection
- Follows the contours of your face

### SkinIQ technology

- Helps you to shave with optimal pressure
- Guides you to an improved technique with fewer passes
- Adjusts to your beard for effortless shaving
- Master your technique with the Philips GroomTribe app

### For a convenient shave

- Powerful cleaning pod for maintenance and hygiene
- 60 minutes of shaving from a 1 hour charge
- Choose a convenient dry or refreshing wet shave
- Even up your moustache and sideburns
- Charging stand

## Shaver series 9000

Wet and Dry electric shaver

S9986/63


# Highlights

### Pressure Guard sensor




Using the right pressure is key for closeness and skin protection. Advanced sensors in the shaver read the pressure you apply, and the innovative light signal shows when you are pressing too hard or too little. For a personalised shave that is just right for you.

### Dual SteelPrecision blades

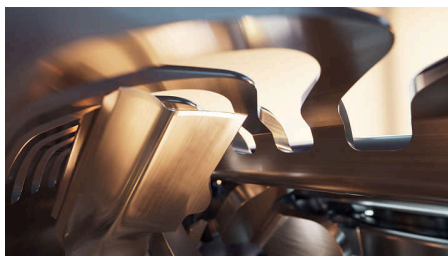


With up to 150.000 cutting actions per minute, the Dual SteelPrecision blades shave close. The 72 high-performance blades are self-sharpening and made in Europe.

### Motion Control sensor

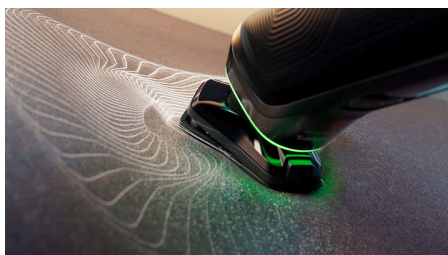


Motion-sensing technology tracks how you shave and guides you to a more efficient technique via our GroomTribe app. After just three shaves, the majority of men achieved a better shaving technique for fewer passes\*\*.

### Protective SkinGlide coating

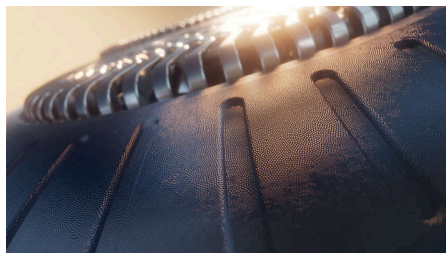


A protective coating lies between the shaver heads and your skin. Made of up to 2000 micro-spheres that coat every square millimetre. Minimise irritation by reducing 25% of friction on skin\*\*\*.

### Power Adapt sensor

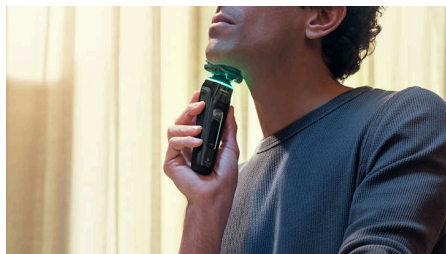

The intelligent facial-hair sensor reads hair density 500 times per second. The technology auto-adapts cutting power for an effortless and gentle shave.

### 360 D Flexing heads

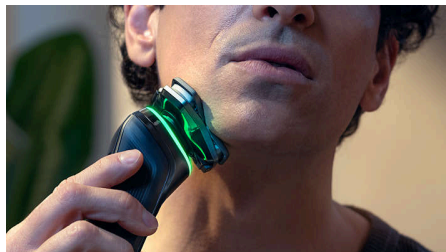

Designed to follow the contours of your face, this Philips electric shaver has fully flexible heads that turn 360° for a thorough and comfortable shave.

### Personalisation via app



Pair your Philips electric shaver to the GroomTribe app and prepare to master your technique. Just track your progress and personalise your routine to achieve a shave that's both close and kind.

### Cable-free Quick Clean Pod



10 x more effective than cleaning with water\*\*\*\*, the powerful cleaning pod thoroughly cleans and lubricates your shaver in just 1 minute. Using it helps maintain shaver performance and increase hygiene.

### Shave wet or dry



A wet and dry shaver that adapts to your preference. Choose a convenient dry shave, or pair with your favourite foam or gel for a refreshing wet shave.

## Shaver series 9000

Wet and Dry electric shaver

S9986/63


# Highlights

### Pop-up trimmer



Refine and define your moustache and sideburns with the pop-up trimmer—and complete your look with ease.

### 60 minutes of cordless shaving

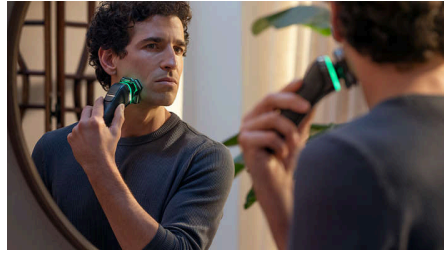

A shaver for at home or on-the-go. Get 60 minutes of shaving time from a 1 hour charge or plug it in for instant and continuous power.

### Charging stand



Effortless charging with convenient stand available to hand.

# Shaver series 9000

Wet and Dry electric shaver

S9986/63

## Specifications

### Accessories

**Maintenance:** Cleaning brush

**Charging stand**

**Quick Clean Pod:** Yes, 4 cartridges included

**Integrated pop-up trimmer**

**Travel and storage:** Travel case

### Software

**Software update:** Philips offers relevant software updates for a period of 2 years after the date of purchase

**App:** GroomTribe, Connects via Bluetooth®

**Smartphone compatibility:** iPhone and Android™ devices

### Power

**Charging:** 1 hour full charge, 5-min quick charge

**Automatic voltage:** 100-240 V

**Battery type:** Li-Ion

**Run time:** 60 minutes

**Max power consumption:** 9 W

### Design

**Handle:** Rubber grip

**Colour:** Ink Black

**Shaving heads:** Angular

### Service

**2 year warranty**

**Replacement head SH91:** Replace every 2 yrs with SH91

### Shaving Performance

**Contour following:** 360 D Flexing heads

**Shaving system:** Dual SteelPrecision blades

**SkinIQ technology:** Power Adapt sensor, Protective SkinGlide coating, Motion Control sensor, Pressure Guard sensor

### Ease of use

**Display:** Advanced OLED display, Pressure guidance, Battery level indicator, Motion control indicator, Travel lock

**Wet & Dry:** Wet and dry use

**Cleaning:** One-touch open, Fully washable

