

# PHILIPS

Wet and dry electric shaver

AquaTouch

DualPrecision blades

Flexing heads

AT892/22



## Great skin protection, smooth shave

wet shave with shaving gel or foam

Enjoy a refreshing shave without worrying about damaging your skin with this wet & dry shaver. The Aquatec seal ensures a comfortable dry shave and a refreshing wet shave. Use it wet with shaving gel or foam for enhanced skin comfort.

### **Ease of use**

- 50+ minutes of cordless shaving on one charge
- Three minute quick charge for one shave
- Pop-up trimmer perfect for sideburns and moustaches
- Washable shaver with QuickRinse system

### **Also use wet for enhanced skin comfort**

- Optimised for use with gel or foam for enhanced skin comfort

### **Shave smooth**

- For a comfortably close shave
- Shaves even the shortest stubble

### **Protect your skin**

- Glides smoothly over the curves of your face

### **A superior shave day after day**

- Jet Clean system

# Highlights

## Aquatec wet and dry



Aquatec seal for a comfortable dry shave and a refreshing wet shave. Optimised for use with shaving gel or foam for enhanced skin comfort, even in the shower.

## DualPrecision Cutting



DualPrecision shaving heads have slots to shave the normal hairs and holes to shave even the shortest stubble.

## Quick charge for 1 shave




Three minute quick charge provides enough power for one shave, so that you are always fast even when the battery is empty.

## Skin Protection System



Rounded low-friction protection heads adjust to the curves of your face to limit skin damage.

## Pop-up trimmer

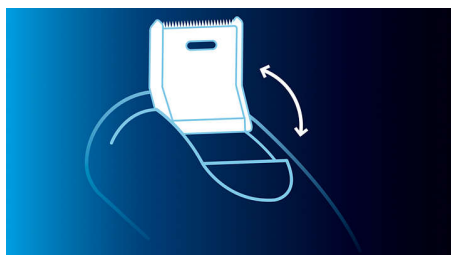

The shaver has a full-width, pop-up trimmer, which is perfect for grooming your sideburns and moustache

## Cordless use 50+ minutes



50+ minutes of cordless power for 17 shaves. Fully charges in 1 hour, so it's always ready when you are.

## Super Lift & Cut Action



For a close shave, the dual-blade system built into the Philips electric shaver lifts hairs to cut comfortably closer.

## Fully waterproof



With QuickRinse system to clean under the tap and can be used in the shower

## Jet Clean system



Use the Jet Clean system to clean and lubricate the blades automatically. It also recharges the battery after every use.

# Specifications

## Shaving Performance

**Shaving system:** DualPrecision cutting, Super Lift and Cut

**Styling:** Pop-up trimmer

## Accessories

**Maintenance:** Cleaning brush, Protective cap

**Pouch:** Shower hanger/storage pouch

**Jet Clean:** Jet Clean

## Ease of use

**Display:** 2 LED indication, Battery full indication, Battery low indication, Charging indication, Quick charge indication

**Cleaning:** Fully waterproof

**Charging:** Quick charge, Rechargeable, Cordless operation

**Shaving time:** 50+ minutes

## Design

**Colour:** Silver & Resilient Blue

**Finishing:** Decopanel lacquered Icy Silver, Front Shell Resilient Blue

**Handle:** Easy grip, Ribbed rubber grip

## Power

**Battery type:** Lithium-ion

**Automatic voltage:** 100-240 V

**Stand-by power:** < 0.2 W

**Max power consumption:** 5.4 W

## Service

**Replacement head:** HQ8 has been replaced by SH50, Replace every 2 yrs with SH50 (these have replaced HQ8)

**2 year guarantee**

