



Philips Azur Performer  
Plus  
Steam iron

Steam 50g/min; 220g steam boost

SteamGlide Plus soleplate  
Anti-calc  
2600 Watts

GC4527/80

# Faster\*, Easier and Smarter

More effective calc clean with calc container

The Azur Performer Plus steam iron combines powerful performance with ease of use. The built-in calc container provides effective calc removal for long-lasting steam performance, auto steam control and SteamGlide Plus soleplate.

## Comfortable ironing

- Auto Steam Control for the right steam for each garment
- Optimal weight for easier manoeuvrability over your garments
- Triple precision tip for optimal control and visibility
- Electronic shut-off when iron is left unattended

## Easy gliding on all fabrics

- SteamGlide Plus soleplate: Our best gliding, faster ironing

## Fast and powerful performance

- Steam output of up to 50 g/min for better crease removal
- 2600 W for fast iron heat-up
- Steam boost up to 220 g to remove the toughest creases

## Calc solution

- Built-In calc container collects calc during ironing
- Self-Clean for effective calc removal

# PHILIPS

# Highlights

## 2600 W for fast heat-up



The 2600 W Azur Performer Plus steam iron will heat up very quickly, and deliver powerful performance for superb ironing results.

## Auto Steam Control



Auto Steam Control takes away the worry of selecting the amount of steam you need. Just select the temperature for the garments you're ironing and off you go.

## Auto shut-off



The electronic shut-off automatically switches the iron off when it is left unattended or tips over.

## Built-In calc container



Our specially designed and built-in calc container collects calc particles during ironing. The Self Clean process flushes the calc out of the iron to maintain consistent ironing performance day after day.

## Optimal weight



The iron has an optimal weight for moving easily over any garment, making ironing less of a hassle and making it easy to move the iron constantly between the board and its heel rest.

## Self-Clean



In addition to the built-in calc container, the self-clean function of your soleplate will remove the most stubborn calc. A clean soleplate will improve your steam performance and ironing results.

## Steam boost up to 220 g




Steam boost up to 220 g to remove the toughest creases

## SteamGlide Plus soleplate



Our best-gliding SteamGlide Plus soleplate to whizz through your ironing. The carefully designed vents ensure a well-balanced steam distribution.

## Triple Precision Tip

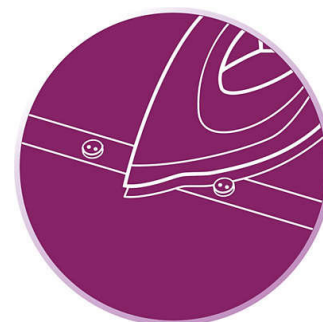

The pointed tip on the Philips Azur Performer is very precise in 3 ways: it has a pointed tip, a button groove and a sleek nose design. The Triple Precision tip enables you to reach into even the trickiest areas, e.g. around buttons or between pleats.

Steam iron

Steam 50g/min; 220g steam boost SteamGlide Plus soleplate, Anti-calc, 2600 Watts

GC4527/80

# Specifications

## Easy to use

- Water tank capacity: 300 ml
- Soft grip
- Power cord length: 3 m

## Fast and powerful crease removal

- Continuous steam output: 50 g/min
- Power: 2600 W
- Steam boost: 220 g

## Scale management

- Descaling and cleaning: Built-in calc container, Self-clean

## Size and weight

- Packaging dimensions (W x H x D): 34,1 x 30 x 36 cm
- Weight of iron: 1.52 kg
- Product dimensions (W x H x D): 16 x 32,6 x 14 cm
- Total weight with packaging: 1.75 kg



Issue date 2023-08-22

Version: 1.0.1

EAN: 87 10103 79844 6

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Compared with an average 2200W Philips steam iron