

PHILIPS

AVENT

DECT Baby Monitor

Audio Monitors

100% private connection

Starry night light projector

Talkback and MP3 lullabies

Vibration alert

 Product Picture

SCD580/01



The most reliable connection to your baby

Reassurance and well-being for you and your baby

Our Philips Avent SCD580/01 Baby Monitor delivers complete comfort and reassurance for you and your baby. Providing the most reliable connection combined with a variety of soothing features. Your baby will love the night light projector!

Freedom and flexibility

- Range up to 330 metres*
- Superior operating time up to 18 hours
- Vibration alert
- Instant dim mode for a peaceful night

Comforting and soothing your baby

- Stay connected with talk back
- Night light + MP3 plug and play
- Calm your baby with the starry night light projector

Reliable, secure connection and constant reassurance

- Always know when your monitor is in range and connected
- Perfect clear sound thanks to DECT Technology
- Energy-saving Smart ECO mode
- Sound-level lights indicate if the baby makes a noise
- Monitor the humidity and temperature in your baby's room

Highlights

Starry night light projector

Your baby may still be restless when you first put them to bed. Help soothe and calm your baby to sleep with the starry night light projection which can be activated from the parent or baby unit. (Remote activation not available in US and Canada).

Night light with MP3 plug

Gently calm your baby with your own selected song and a warm tranquil glow of the night light. With MP3 plug and play, you can play your own selected songs. Your personal music in the baby room will help your baby drift to sleep in no time. (Remote activation not available in US and Canada).

Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting products like other baby monitors, cordless phones and mobile phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

Perfect clear sound



Hear every tiny giggle, gurgle and hiccup with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby all the time.

Smart ECO mode




The unique Smart ECO mode automatically minimises your transmission power and increases your battery lifetime. The closer you are to your baby, the less power is needed for a perfect connection (not available in US and Canada).

Sound activation 5 LED lights



Lights are activated to indicate the level of sound in your baby's room, even when the Parent Unit is muted.

Always connected

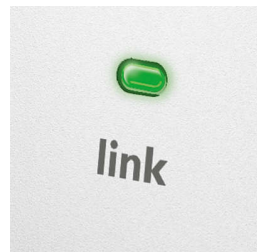

The parent unit will alert you when your monitor is out of range or when the power is low, helping you to make sure that you are always connected to your baby.

Temperature and humidity sensor

Combined humidity and temperature sensor allows you to monitor the climate in your baby's room. Your baby can't regulate its body

temperature as well as you can and a slight change in temperature, and too much or too little humidity can make your baby restless. A specially combined humidity and temperature sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes. Monitor the complete climate in your baby's room.

330 m Range



Indoor range up to 50 metres*. Outdoor range up to 330 metres*.

Operating time up to 18 hours



The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 18 hours before re-charging is required.

Vibration alert

Personalise your alert settings and be notified by a silent and subtle vibration of the parent unit.

Peaceful night mode

Press the night dim button to instantly activate the peaceful night mode. In this mode the light intensity of the lights, the display, as well as the volume of the alerts are reduced. Easily press the night dim button again in order to switch back to normal operating mode.

Specifications

Development stages

Stage: Pregnancy, 0–6 months

Features

Comforting night light
Indoor range up to: 50 m
Linked and in range indication
Outdoor range up to: 330 metres
Talkback function
LCD Screen
Soothing lullabies

Power

Operating time on battery hour: 18 hours
Charging time: 10 hour(s)
Power Supply: 120 V (US), 220–240 V

Tuner/Reception/Transmission

Frequency band: DECT
Automatic channel selection

Convenience

Auto out-of-range warning
Battery low indication
Battery charging indication
Volume control
Sound-level lights

Convenience

Sensitivity control

Technical specifications

Storage temperature range: 10–40 °C
Operating temperature range °C: 10 – 40 °C

Logistic data

F-box dimensions (W x H x D): 220 x 156 x 94 mm

Features

Charging station
DECT Technology
Energy-saving Smart ECO mode: ECO mode, Yes
Peaceful night mode and vibration alert
Sound activation lights: 5 LED lights
Starry night light projector
Temperature/humidity sensor

