

Philips Marathon
Bagless vacuum cleaner

ParquetCare

FC9214/01



Professional cleaning

High cleaning power that lasts and lasts

Thanks to Philips' new Cyclone Filter technology, the bagless Marathon delivers suction power that lasts. Its efficient design and 2000 W motor deliver very high max. suction power in its category, and it's the quietest bagless available.

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action


Thorough cleaning results all the time

- 2000 Watt motor generating max. 350 Watt suction power
- High performance cyclone filter for lasting suction power

PHILIPS

Highlights

Powerful and quiet motor

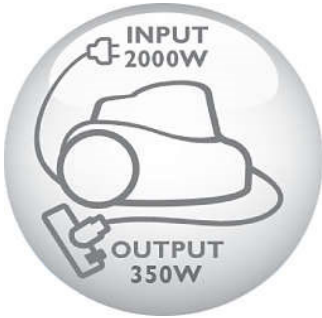

The Marathon's powerful 2000 Watt motor generates very high max. suction power in its category. Its efficient design also makes it exceptionally quiet.

Lasting suction power

Thanks to its Cyclone Filter technology, the Marathon maintains a high level of suction power over time, whereas average vacuum cleaners lose suction power quickly as their dust bag or filter becomes clogged.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.



Super Parquet nozzle



The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve the best results without requiring any detergents or brushes.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimised airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 76 dB
- Airflow (max): 40 l/s
- Suction power (max): 350 W
- Vacuum (max): 30 kPa
- Vacuum (max): 30 kPa
- Airflow (max): 40 l/s
- Input power (max): 2000 W
- Suction power (max): 350 W

Design

- Colour: Black

Usability

- Tube coupling: Button
- Action radius: 12 m
- Action radius: 12 m
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 9 m
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Weight and dimensions

- Weight of product: 7.2 kg

Filtration

- Dust capacity: 2 L
- Dust capacity: 2 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- HEPA AirSeal

