



Philips Genuine  
replacement filter  
Integrated 3-in-1

**12 month lifespan**

Filters 99.97% at 0.003 um  
Pre-filter, HEPA, Active Carbon  
Filters gases and odors

**FYM860/30**

## 3 filters in one for lasting good performance

Original Philips filter that fits perfectly

A 3-layer filtration with NanoProtect HEPA, activated carbon and a pre-filter ensures that you are protected against bacteria, pollen, dust, PM2.5, pet dander, gases and other pollutants. This is a replacement filter for Air Performer.

### **Genuine Philips filter**

- Perfect choice for consistently high performance
- Philips filters make sure your appliance works effectively

### **Long-lasting performance**

- 12 months of use
- Follow the smart filter status indicator on your device
- Connect to the device and track the filter life

### **Designed around you**

- Clean the pre-filter regularly
- Eliminates 99.97% of all unseen particles from the air(3)

# PHILIPS

## Integrated 3-in-1

12 month lifespan Filters 99.97% at 0.003 um, Pre-filter, HEPA, Active Carbon, Filters gases and odors

# Highlights

### Original filter



The original Philips filter was designed at the same time as the device and they are perfectly matched. This guarantees the uninterrupted smooth operation of the device.

### Filter lifetime



The integrated Philips 3-in-1 filter provides consistent protection and guarantees optimal filtration for up to 12 months. (1)

### Smart filter indicator



Your Philips tool will tell you when to clean the pre-filter and when it's time to replace the

filter. It can be replaced in less than a minute. This makes maintenance of the device effortless and ensures that you can always enjoy clean, healthy air.

### Cleaning the filter



For optimal filtration performance, vacuum the pre-filter regularly.


### Quality you can trust



Philips air filters undergo a series of mandatory and strict inspection tests before being released from the factory. They are subject to strict checks for service life and durability, for continuous use 24 hours a day, 7 days a week. Our filters are designed to provide the best performance from your Philips purifier until the last day of the filter's life.

FYM860/30

### NanoProtect HEPA filtration

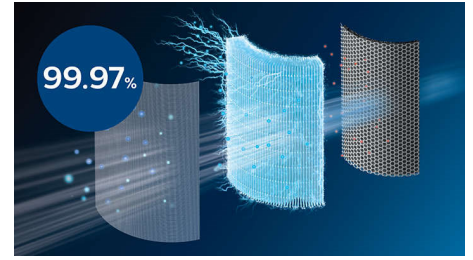

Only Philips Air Purifiers have NanoProtect HEPA filtration with active carbon and pre-filter to remove 99.97% of particles as small as 0.003 microns(4). NanoProtect HEPA technology not only traps pollutants, but also uses an electrostatic charge to attract them, cleaning up to 2X more air than traditional HEPA H13 filtration, with higher energy efficiency(5).

### Connected to app



Keep an eye on the life and status of your filter anytime, anywhere with the Air+ app. You will be notified when it is time to replace your filter and you can easily order a new filter directly through our app (2).

## Integrated 3-in-1

12 month lifespan Filters 99.97% at 0.003 um, Prefilter, HEPA, Active Carbon, Filters gases and odors

FYM860/30

# Specifications

### Weight and dimensions

- Dimensions of packaging (LxWxH): 222 x 222 x 260 mm
- Product weight: 0.78 kg
- Weight incl. packaging: 1.04 kg

### Design and finishing

- Color(s): White black

### Performance

- Filters out odor
- Filters out TVOC
- Filter: Integrated HEPA filter, activated carbon filter and pre-filter

### Replacement

- Integrated filter
- For Philips air purifier(s): AMF870, AMF765

### Weight and dimensions

- Dimensions of product (LxWxH): 211 x 211 x 253 mm

### Performance

- Filtration of particles: 99.97% at 0.003 micron
- Filtration of allergens: 99.97%
- Filtration of viruses and aerosols: 99.99%



Issue date 2023-02-22

Version: 6.6.1

EAN: 87 20389 01949 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* (1) The recommended lifespan is calculated based on the average usage time of the Philips users and the WHO data on the pollution level in the city. Actual life is affected by usage environment and frequency.

\* (2) Only applicable in countries where the Philips store is available.

\* (3) Calculated according to NRCC-54013 test standard, using cigarette smoke CADR tested according to GB/T18801-2015.

\* (4) From the air that passes through the filter, tested with NaCl aerosol by a 3rd party laboratory.

\* (5) Philips air purifiers have higher Clean Air Delivery Rate and energy efficiency with a NanoProtect HEPA filter than with a HEPA H13 filter, tested to GB/T 18801.