



Philips Air Performer 7000 series
2-in-1 Air Purifier and Fan

Purifies rooms up to 70m²
270 m³/h Clean Air Rate (CADR)
HEPA & Active Carbon filter
Connected to Air+ App



AMF765/30

Maximum purification, powerful cooling

Cleans & cools

Philips Air Performer 2-in-1 Purifier provides maximum purification, powerful cooling for pure, fresh air. It effectively and quickly removes pollutants, PM2.5, allergens and viruses to keep it clean and safe. AI powered, it senses, adapts and automatically cleans the air & cools you down. Monitor the air quality with real-time feedback and control your air purifier with the Philips Air+ app.

High Performance

- Thoroughly purifies large rooms up to 70 m²
- Eliminates 99.97% of all unseen particles from the air(3)
- Cools you down with powerful clean airflow
- Proven virus removal, tested with H1N1 and HCov-E229 viruses

Seamless Experience

- Automatically senses and adapts for best results
- Real-time air quality feedback with smart AeraSense sensors
- Sleep mode with ultra-quiet operation
- Energy-efficient design

Smart Design

- The Philips Air+ app: your smart, clean air solution
- Fully adjustable airflow for cooling or air circulation
- Thoroughly tested for durability and quality.

PHILIPS

2-in-1 Air Purifier and Fan

Purifies rooms up to 70m² 270 m³/h Clean Air Rate (CADR), HEPA & Active Carbon filter, Connected to Air+ App


Highlights

Whole-room purification



It distributes powerful clean airflow to every corner of the room at a CADR (Clean Air Delivery Rate) of 270 m³/h(1), thoroughly purifying rooms up to 70 m²(2) to protect you from bacteria, virus, pollen, dust, pet dander, dust mites, mold spores, harmful gases, odors and other pollutants.

NanoProtect HEPA filtration

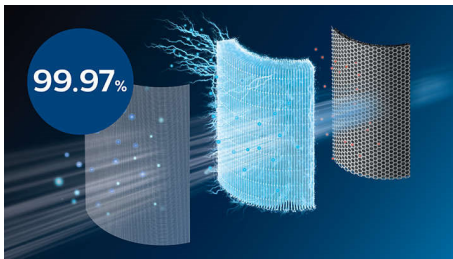

Only Philips Air Purifiers have NanoProtect HEPA filtration with active carbon and pre-filter to remove 99.97% of particles as small as 0.003 microns(3). NanoProtect HEPA technology not only traps pollutants, but also uses an electrostatic charge to attract them, cleaning up to 2X more air than traditional HEPA H13 filtration, with higher energy efficiency(4).

Powerful cooling



Cools you with powerful clean airflow that feels natural and pleasant. With adjustable


airflow rotation of up to 350 degrees, it will reach everywhere. Thanks to its bladeless design, it does not blow gusts of air, creating a consistent stream of fan airflow up to 1730 m³/h, fully customizable with 10 speeds to suit your comfort needs.

Always adapted to you



Powered by the AI (artificial intelligence) technology. Air Performer cleans the air and cools you down when you need it. Philips' self-adapting technology with AI not only detects air quality, but also analyses your usage habits to customize purification performance while keeping noise levels and power consumption as low as possible(9).

Sensors and Display

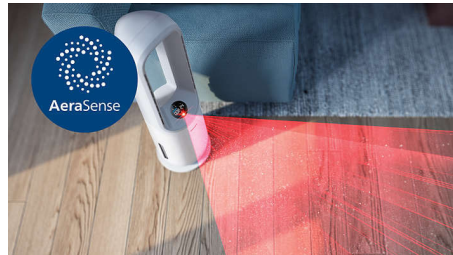

Smart AeraSense sensors continually scan the air and report in real-time, immediately reacting to any increase in pollution to improve your air quality. Check your purifiers digital display or app to track ultra-fine pollutants (PM2.5), temperature and humidity.

AMF765/30

Ultra-quiet sleep mode



In sleep mode, it is quieter than a whisper with only 20 dB(A)(5) of noise level. Its light sensor detects when it is dark, turning the lights off automatically. In auto mode, it keeps noise levels to a minimum as it learns when it needs to perform or when it needs to be quiet.

Low energy consumption



Thanks to its energy-efficient design, it uses 40 W to purify the air, less than a traditional light bulb. In auto mode, the motor only runs when and for as long as needed, prolonging filter lifetime whilst saving energy.

The Philips Air+ app



Air+ app provides a smart experience that ensures you breathe clean and healthy air. The app tracks indoor and outdoor air quality in real-time and keeps you in control, at home or away, with a digital remote, a smart scheduler and hands-free via Alexa and Google Home(6)

2-in-1 Air Purifier and Fan

Purifies rooms up to 70m² 270 m³/h Clean Air Rate (CADR), HEPA & Active Carbon filter, Connected to Air+ App

AMF765/30

Specifications

Performance

- CADR (Particle, GB/T): 270 m³/h(1)
- Fan airflow: Up to 1730 m³/h
- Room size (NRCC): up to 70 m²(2)
- Particle filtration: 99.97% at 0.003 microns(3)
- Allergens filtration: 99.97% (8)
- HCoV-E229 virus removal: 99.99%(7)

Filtration

- Pre-filter
- HEPA
- Active Carbon

Functions

- Circulation
- Fan

Usability

- Min. sound level (Sleep mode): 20 dB(5)
- Max. sound level (Turbo mode): 47 dB(5)
- Cord length: 1.8m white
- Timer & scheduler
- Child Lock
- Remote Control included
- Oscillation: Up to 350°
- Artificial Intelligence (AI): Self-Adaptive Technology

Sensors & Display

- AeraSense technology
- Air quality feedback: Color, Numerical
- PM2.5
- Temperature
- Humidity
- Light sensor

Modes

- Auto
- Sleep
- Turbo
- Manual speed settings: 10

Energy efficiency

- Stand-by power consumption: <20W
- Voltage: 220-240V
- Remote battery (CR2032)
- Max Fan Power Consumption: 40W

Connectivity

- App, connects via Wi-Fi: Air+
- Smartphone compatibility: iPhone and Android devices
- Voice control: Alexa, Google Home(6)

Weight and dimensions

- Product weight: 7,30 Kg
- Product dimensions (L*W*H): 26,2x25,6x106,2 cm
- Weight (Incl. packaging): 11,33 Kg
- Packaging dimensions (L*W*H): 34,1x33,6x115,2 cm

Maintenance

- Color(s): Cloud white, light grey
- Recommended filter change: 12months(10)
- Replacement filter: FYM860
- Service: 2-year worldwide guarantee



Issue date 2024-01-31

Version: 21.21.2

EAN: 87 20389 02834 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

- * (1) CADR is tested by a certified third party lab, according to GB/T18801-2015.
- * (2) Calculated according to NRCC-54013 test standard, using cigarette smoke CADR tested according to GB/T18801-2015.
- * (3) From the air that passes through the filter, tested with NaCl aerosol by a 3rd party laboratory.
- * (4) Philips air purifiers have higher Clean Air Delivery Rate and energy efficiency with a NanoProtect HEPA filter than with a HEPA H13 filter, tested to GB/T 18801.
- * (5) The average sound level, based on GB/T4214.1-2017 (IEC 60704-1 - 2020, MOD). The sound level may change due to the conditions in your room and the location of the device.
- * (6) Alexa and Google Home availability depends on your location.
- * (7) Microbial reduction rate test at external lab, with appliance running in turbo mode for 1.5 h in a test chamber contaminated with HCoV-229E virus aerosols.
- * (8) From the air that passes through the filter, tested by third party lab OFI using house dust mite, birch pollen, cat allergens and fungal spores
- * (9) Use of Artificial Intelligence (AI) in your appliance requires connection to the Air+ app via Wi-Fi.
- * (10) The recommended service life for the device is based on a theoretical calculation of the average annual regional values of harmful air particles outdoors and daily use of the air purifier for 16 hours in automatic mode.