

**PHILIPS**

GoZero

Hydration bottle

GO **Pure,**  
GO **Hot,**  
GO **Cold,**  
GO **Anywhere!**






Goodbye, single-use plastic bottles.

Goodbye, musty reusable bottles.

Hello, self-cleaning smart bottle!

Thank you for being part of the solution, and helping to  
reduce single-use plastic waste.

Stay hydrated, and enjoy!

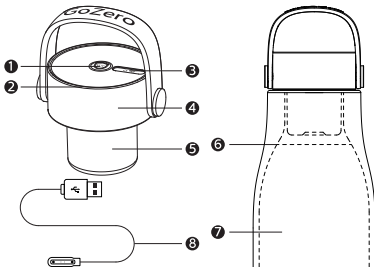

## EN

- ① UV-C activation button
- ② Indicator light
- ③ Magnetic charge port
- ④ Cap
- ⑤ UV-C module
- ⑥ Max water line
- ⑦ Vacuum insulated stainless steel bottle
- ⑧ USB cable

## TH

- ① ปุ่มเปิดใช้งาน UV-C
- ② ไฟแสดงสถานะ
- ③ พอร์ตชาร์จแม่เหล็ก
- ④ ฝาปิด
- ⑤ โมดูล UV-C
- ⑥ ระดับน้ำสูงสุด
- ⑦ ขวดสแตนเลสสุญญากาศ
- ⑧ สาย USB



## Getting started

### 1. Unlock the bottle

Clean the bottle except for the cap with mild detergent by hand or in the dishwasher (max 50°C). Rinse the cap with clean water. Screw on the cap, press and hold the UV-C activation button for 3 seconds to unlock the bottle for the first time.

The indicator light will flash blue, telling you the bottle is ready to use. 

### 2. Power up

Connect the USB cable with the charging port on the cap, and plug the USB into any USB wall charger until the battery is fully charged.

Notes: DO NOT charge with any USB cable other than the USB cable provided with the bottle.

#### Slowly-flashing green light

Charging

#### Steady green light

Fully charged

#### Steady orange light

Low battery, please recharge the bottle as soon as possible.

#### Pulsing red light\*

Out of battery

#### Steady red light

Something is wrong. Visit [www.philips.com/water](http://www.philips.com/water) for troubleshooting and support.

\* When the bottle is out of battery, it will be off completely. Please recharge and unlock the bottle according to step 1.

## Sanitizing the bottle

---

### 1. Self-cleaning

The UV-C will be activated every 2 hours automatically to keep the bottle clean (10 seconds per cycle with slowly-flashing blue light). This function can be turned off by pressing and holding the UV-C button for 3 seconds until it shows steady purple light.

### 2. Sanitizing the bottle

After you enjoy your favourite hot and cold drinks, hand wash the bottle or put it in the dishwasher except for the cap. When cleaning is completed, you may screw the cap on and press the UV-C button once to further sanitize the bottle. This helps to prevent unpleasant smell from growing inside the bottle.

Notes:

This product is not intended to purify liquids other than water.

## Purifying water

---

1. Fill the bottle with water up to the max water line.
2. Screw the cap on, and press the UV-C button once to activate the purification function. The indicator light will flash blue slowly for 3 minutes. You may shake the bottle gently during the purification process to ensure an even result. Enjoy freshly purified water when the light is off.

3. While using the bottle in the backcountry or during travels, we recommend to run the purification cycle twice to ensure the safety of the water. It's also advised to take additional precautionary methods depending on the water source quality, since the bottle doesn't filter out contaminants such as particulates, chemicals or heavy metals.

Notes:

- Do not interrupt the purification cycle by removing the cap or pressing the button.
- This product is not intended to purify liquids other than water.

## **Safety first**

---

NEVER activate the UV-C function when the cap is taken outside the bottle. If it's activated accidentally, the indicator light will flash orange for 5 seconds to remind you, and the UV-C function will be off automatically. ☀️

If the liquid is too hot (above 60°C/140°F) or too cold ( below 4°C/39.2°F) inside the bottle, the safety protection mode will be on automatically to protect the UV-C module, and the indicator light will flash orange for 10 seconds. ☀️

## **Warnings & Cautions**

---

Please read and understand the following prior to operating this product. Always follow the instruction when using the GoZero™ Smart bottle and the cap. Improper operation of the Smart bottle may cause injury.

- Always use the clearest and reliable water source possible when using the bottle in the backcountry or during travels. Improper usage of GoZero™ Smart bottle increases your risk of exposure to harmful microorganisms and getting a gastrointestinal illness. Since the bottle doesn't filter out contaminants, it's recommended to apply filtration first, then use the bottle to further purify the water. GoZero™ Smart should only be used to purify water from 4°C/39.2°F to 60°C/140°F.
- This product is not intended for usage by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children over 8 years old should be supervised to ensure that they do not play with appliance. This product is not suitable or intended for use by children under 8 years old. Keep the product out of the reach of small children.
- Do not look directly at the UV-C light. It can irritate eyes and skin or may otherwise be potentially harmful.
- The cap of GoZero™ Smart bottle should be used exclusively with the Smart bottle. The efficacy of the purification and sterilization has only been tested with the GoZero™ Smart bottle. We cannot guarantee the effectiveness when it's used with alternative bottle designs.
- Never tamper with, open or alter the GoZero™ Smart bottle or the cap. If the GoZero™ Smart bottle or any component of it malfunctions or fails to perform as expected, stop use immediately. Do not open or attempt to repair the GoZero™ Smart bottle or its components.

- The UV-C light is a high voltage device. Do not open, expose, modify or touch internal circuitry as this can lead to high voltage shock. Removal or tampering with the electronic circuit board of UV-C light assembly may cause injury or damage to the user or the product, and will void all warranties.
- To prevent danger or shock hazard, keep and store this product away from rain or liquid. Do not use the charger near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, or swimming pool.
- Clean the outside of the product with clean moist cloth. Never use any strong cleaning sprays or fluids, or similar chemicals on the product.
- When recharging, only connect the adaptor as described in the product instructions or user manual. Do not charge with any USB cable other than the USB cable provided with your Smart bottle. Do not remove the bottle cap while purifying cycle is in progress. If the cap is removed during a purifying cycle, the GoZero™ Smart bottle's automatic safety protocols will cancel the cycle and turn off the UV-C light to avoid any harm from contact with UV light to eyes or skin.
- To cancel a purifying cycle, first press the button on top of the cap, then safely remove the cap.
- Do not use as a light source.
- Do not expose the cap to temperatures below freezing or above 60°C/140°F.
- The cap's UV-C light is not intended to disinfect water on the lip or exterior surfaces of the bottle where the light does not reach. It is not intended to disinfect outer surfaces of a drinking container, i.e. those that typically contact the mouth

when drinking. Be certain that the bottle and cap have been properly cleaned prior to use.

- As with any water treatment system, you should always have a backup method available.
- Do not allow impact to the UV-C light. If the cap or UV-C light assembly is cracked, chipped or damaged, do not operate.
- While carefully controlled microbiological testing has been conducted, the actual use of the UV-C function in the field may produce results that vary from laboratory test data.
- The battery must be removed from the appliance before it is scrapped.
- This appliance contains batteries that are non-replaceable.

## **Guarantee & Service**

---

If you need information or if you have any problems, please visit the Philips website at [www.philips.com/water](http://www.philips.com/water) or contact the consumer care center in your country. If there is no consumer care center in your country, go to the local dealer. Find more warranty details on [www.philips.com/water](http://www.philips.com/water).

## **Disclaimer**

---

AquaShield and its affiliated entities and related companies shall be neither liable for any damages arising out of or because of the use of the GoZero™ Smart bottle for any purpose other than for which it is clearly intended, nor for any malfunction resulting from the failure of the user to strictly follow the usage and safety information in this manual.

## Disposal

The GoZero™ Smart bottle cap contains a rechargeable lithium-polymer battery, therefore dispose the product in accordance with applicable local laws and regulations. Contact your local town or city officials for more information regarding the disposal.

### Removing the rechargeable battery before disposal (for EU based users)

Make sure the battery is completely empty when you remove it.

1. Remove the silicone cover. (A-1)
2. Remove the top plastic cover. (A-2)
3. Pry PCB loose. (A-3)
4. Pull out the wires from PCB. (A-4)
5. Remove the batty. DO NOT puncture the battery. (A-5)



A-1



A-2



A-3



A-4



A-5



Before disposal, do not place the product together with household waste. You should hand it over to a government-designated recycling center. By doing this, you help to preserve the environment.

Please keep this user manual for future reference.

## เริ่มต้นใช้งาน

### 1. ปลดล็อกขวด

ทำความสะอาดขวดยกเว้นฝาด้วยน้ำยาอ่อน ๆ ด้วยมือหรือในเครื่องล้างจาน (สูงสุด 50°C) ล้างฝาด้วยน้ำสะอาดขึ้นฝาแล้วกดปุ่มเปิดใช้งาน UV-C ค้างไว้ 3 วินาทีเพื่อปลดล็อกขวดในครั้งแรก ไฟแสดงสถานะจะกะพริบเป็นสีน้ำเงิน เพื่อบอกคุณว่าขวดพร้อมใช้งานแล้ว 

### 2. เปิดเครื่อง

เชื่อมต่อขั้วต่อ USB กับพอร์ตชาร์จที่ฝาปิดและเสียบ USB เข้ากับอุปกรณ์ชาร์จ USB ที่หนึ่งจนกว่าแบตเตอรี่จะชาร์จเต็ม

หมายเหตุ: อย่าชาร์จด้วยสาย USB อื่นนอกเหนือจากสาย USB ที่ให้มาพร้อมกับขวด



**ไฟสีเขียวกะพริบซ้ำๆการ**

ชาร์จไฟ



**สีเขียวคงที่ชาร์จ**

เต็ม



**ไฟสีส้มคงที่**

แบตเตอรี่เหลือน้อยโปรดชาร์จขวดโดยเร็วที่สุด



**ไฟสีแดงกะพริบ \***

แบตเตอรี่หมด



**ไฟสีแดงคงที่มี**

บางอย่างผิดปกติ ไปที่ [www.philips.com/water](http://www.philips.com/water) สำหรับการแก้ไขปัญหาและการสนับสนุน

\* เมื่อแบตเตอรี่หมดขวดจะดับสนิท กรุณาเติมพลังและปลดล็อกขวดตามขั้นตอนที่ 1.



## ขวดฆ่าเชื้อ

### 1. การทำความสะอาดตัวเอง

UV-C จะเปิดใช้งานทุกๆ 2 ชั่วโมงโดยอัตโนมัติเพื่อรักษาความสะอาดของขวด (10 วินาทีต่อรอบโดยมีแสงสีน้ำเงินกะพริบซ้ำๆ) ฟังก์ชันนี้สามารถปิดได้โดยกดปุ่ม UV-C ค้างไว้ 3 วินาทีจนกว่าจะแสดงแสงสีม่วงสม่ำเสมอ.

### 2. การฆ่าเชื้อขวด

หลังจากที่คุณเพลิดเพลินกับเครื่องดื่มร้อนและเย็นที่คุณชื่นชอบแล้วให้ล้างขวดด้วยมือหรือใส่ในเครื่องล้างจานยกเว้นฝาปิด เมื่อทำความสะอาดเสร็จแล้วคุณสามารถขึ้นฝาและกดปุ่ม UV-C หนึ่งครั้งเพื่อฆ่าเชื้อขวดต่อไป วิธีนี้ช่วยป้องกันไม่ให้อากาศไม่พึงประสงค์ฟุ้งขึ้นภายในขวด.

หมายเหตุ:

ผลิตภัณฑ์นี้ไม่ได้มีไว้เพื่อทำให้ของเหลวอื่น ๆ บริสุทธิ์นอกจากนี้

## น้ำบริสุทธิ์

### 1. เติมน้ำลงในขวดให้ถึงขีดสุด.

2. ขึ้นฝาปิดและกดปุ่ม UV-C หนึ่งครั้งเพื่อเปิดใช้งานฟังก์ชันการทำให้บริสุทธิ์ ไฟแสดงสถานะจะกะพริบเป็นสีน้ำเงินซ้ำๆเป็นเวลา 3 นาที คุณอาจเขย่าขวดเบา ๆ ในระหว่างขั้นตอนการทำให้บริสุทธิ์เพื่อให้ได้ผลลัพธ์ที่สม่ำเสมอ เพลิดเพลินกับน้ำบริสุทธิ์เมื่อปิดไฟ

3. ในขณะที่ใช้ขวดในพื้นที่ทรากันดารหรือระหว่างการเดินทางเราขอแนะนำให้ใช้รอบการทำให้บริสุทธิ์สองครั้งเพื่อความปลอดภัยของน้ำ นอกจากนี้ยังแนะนำให้ใช้วิธีการป้องกันเพิ่มเติมโดยขึ้นอยู่กับคุณภาพของแหล่งน้ำเนื่องจากขวดไม่กรองสิ่งปนเปื้อนเช่นอนุภาคสารเคมีหรือโลหะหนัก.

หมายเหตุ:

- อย่าขัดจังหวะวงจรการทำให้บริสุทธิ์โดยการถอดฝาหรือกดปุ่ม.
- ผลิตภัณฑ์นี้ไม่ได้มีไว้เพื่อชำระล้างของเหลวอื่น ๆ นอกเหนือจากนี้

## ปลอดภัยไว้ก่อน

อย่าเปิดใช้งานฟังก์ชัน UV-C เมื่อนำฝาออกนอกขวด หากเปิดใช้งานโดยไม่ได้ตั้งใจไฟแสดงสถานะจะกะพริบเป็นสีส้มเป็นเวลา 5 วินาทีเพื่อเตือนคุณและฟังก์ชัน UV-C จะปิดโดยอัตโนมัติ. ☀️

หากของเหลวร้อนเกินไป (สูงกว่า 60 °C / 140 °F) หรือเย็นเกินไป (ต่ำกว่า 4 °C / 39.2 °F) ภายในขวดโหมดป้องกันความปลอดภัยจะเปิดโดยอัตโนมัติเพื่อป้องกันโมดูล UV-C และไฟแสดงสถานะจะกะพริบเป็นสีส้ม 10 วินาที. ☀️

## คำเตือนและข้อควรระวัง

โปรดอ่านและทำความเข้าใจสิ่งต่อไปนี้ก่อนใช้งานผลิตภัณฑ์นี้ ปฏิบัติตามคำแนะนำทุกครั้งเมื่อใช้ขวด GoZero™ Smart และฝาขวด การใช้งานขวดอัจฉริยะอย่างไม่เหมาะสมอาจทำให้เกิดการบาดเจ็บได้.

- ควรใช้แหล่งน้ำที่ชัดเจนและเชื่อถือได้เสมอเมื่อใช้ขวดในพื้นที่ทุรกันดารหรือระหว่างการเดินทาง การใช้ GoZero™ Smart bottle อย่างไม่เหมาะสมจะเพิ่มความเสี่ยงต่อการสัมผัสกับจุลินทรีย์ที่เป็นอันตรายและการเจ็บป่วยในระบบทางเดินอาหาร เนื่องจากขวดไม่ได้กรองสิ่งปนเปื้อนขอแนะนำให้ใช้การกรองก่อนจากนั้นใช้ขวดเพื่อทำให้น้ำบริสุทธิ์ต่อไป ค ใช้ GoZero™ Smart เพื่อทำให้น้ำบริสุทธิ์ตั้งแต่ 4 °C / 39.2 °F ถึง 60 °C / 140 °F เท่านั้น.
- ผลิตภัณฑ์นี้ไม่ได้มีไว้สำหรับผู้ที่มีความสามารถทางประสาทสัมผัสทางร่างกายหรือจิตใจลดลงหรือขาดประสบการณ์และความรู้เว้นแต่จะได้รับการดูแลหรือให้คำแนะนำเกี่ยวกับการใช้เครื่องโดยผู้รับผิดชอบด้านความปลอดภัย เด็กอายุมากกว่า 8 ปีควรได้รับการดูแลเพื่อให้แน่ใจว่าพวกเขาไม่เล่นกับเครื่องใช้ไฟฟ้า ผลิตภัณฑ์นี้ไม่เหมาะหรือมีไว้สำหรับเด็กอายุต่ำกว่า 8 ปี เก็บผลิตภัณฑ์ให้พ้นมือเด็กเล็ก.
- อย่ามองไปที่แสง UV-C โดยตรง อาจทำให้ดวงตาและผิวหนังระคายเคืองหรืออาจเป็นอันตรายได้.

- ควรใช้ผ้าขวด GoZero™ Smart กับขวดอัจฉริยะเท่านั้น ประสิทธิภาพของการทำให้บริสุทธิ์และการฆ่าเชื้อได้รับการทดสอบกับขวด GoZero™ Smart เท่านั้น เราไม่สามารถรับประกันประสิทธิภาพเมื่อใช้กับการออกแบบขวดอื่น ๆ.
- ห้ามจัดแวงเปิดหรือดัดแปลงขวด GoZero™ Smart หรือฝาปิด หากขวด GoZero™ Smart หรือส่วนประกอบใด ๆ ทำงานผิดปกติหรือไม่ทำงานตามที่คาดไว้ให้หยุดใช้ทันที อย่าเปิดหรือพยายามซ่อมแซมขวด GoZero™ Smart หรือส่วนประกอบต่างๆ
- แสง UV-C เป็นอุปกรณ์ไฟฟ้าแรงสูง อย่าเปิดเปิดเผยดัดแปลงหรือสัมผัสดวงจรวดภายในเพราะอาจทำให้ไฟฟ้าช็อตแรงสูงได้ การถอดหรือการดัดแปลงแฉวงจรวดอิเล็กทรอนิกส์ของชุดประกอบไฟ UV-C อาจทำให้เกิดการบาดเจ็บหรือความเสียหายต่อผู้ใช้หรือผลิตภัณฑ์และจะทำให้การรับประกันทั้งหมดเป็นโมฆะ
- เพื่อป้องกันอันตรายหรืออันตรายจากการกระแทกให้เก็บและจัดเก็บผลิตภัณฑ์นี้ให้ห่างจากฝนหรือของเหลว อย่าใช้เครื่องชาร์จใกล้กับน้ำตัวอย่างเช่นใกล้อ่างอาบน้ำอ่างล้างหน้าอ่างล้างจานอ่างซักผ้าหรือสระว่ายน้ำ
- ทำความสะอาดด้านนอกของผลิตภัณฑ์ด้วยผ้าชุบน้ำสะอาด ห้ามใช้สเปรย์ทำความสะอาดที่รุนแรงหรือของเหลวหรือสารเคมีที่คล้ายกันกับผลิตภัณฑ์.
- เมื่อชาร์จไฟใหม่ให้เชื่อมต่ออะแดปเตอร์ตามที่อธิบายไว้ในคำแนะนำผลิตภัณฑ์หรือคู่มือผู้ใช้เท่านั้นอย่าชาร์จด้วยสาย USB อื่นนอกเหนือจากสาย USB ที่ให้มาพร้อมกับขวดอัจฉริยะของคุณ อย่าถอดผ้าขวดออกในขณะที่กำลังดำเนินการฟอก หากฝาปิดถูกถอดออกในระหว่างรอบการทำให้บริสุทธิ์โปรดคอลความปลอดภัยอัตโนมัติของ GoZero™ Smart bottle จะยกเลิกจรวดและปิดแสง UV-C เพื่อหลีกเลี่ยงอันตรายจากการสัมผัสกับแสง UV ต่อดวงตาหรือผิวหนัง.
- ในการยกเลิกรอบการทำให้บริสุทธิ์ก่อนอื่นให้กดปุ่มที่ด้านบนของฝาปิด จากนั้นถอดผ้าออกอย่างปลอดภัย.
- ห้ามใช้เป็นแหล่งกำเนิดแสง.
- อย่าให้หมวกสัมผัสกับอุณหภูมิที่ต่ำกว่าจุดเยือกแข็งหรือสูงกว่า 60 °C / 140 °F

- แสง UV-C ของฝักปิดไม่ได้มีไว้เพื่อฆ่าเชื้อนํ้าบนริมฝีปากหรือพื้นผิวด้านนอกของขวดที่แสงส่องไม่ถึง ไม่ได้มีไว้เพื่อฆ่าเชื้อพื้นผิวด้านนอกของภาชนะสำหรับดื่ม กล่าวคือโดยทั่วไปจะสัมผัสกับปากเมื่อดื่ม ต้องแน่ใจว่าขวดและฝักได้รับการทำความสะอาดอย่างเหมาะสมก่อนใช้.
- เช่นเดียวกับระบบบำบัดน้ำใด ๆ คุณควรมีวิธีสำรองข้อมูลไว้เสมอ
- อย่าให้กระทบกับแสง UV-C หากฝักครอบหรือชุดประกอบไฟ UV-C แตกบิ่นหรือเสียหายห้ามใช้งาน
- ในขณะที่มีการทดสอบทางจุลชีววิทยาที่มีการควบคุมอย่างรอบคอบการใช้ฟังก์ชัน UV-C ในภาชนะนํ้าจริงอาจให้ผลลัพธ์ที่แตกต่างจากข้อมูลการทดสอบในห้องปฏิบัติการ.
- อุปกรณ์นี้มีแบตเตอรี่ที่ไม่สามารถเปลี่ยนได้.

## **การรับประกันและการบริการ**

หากคุณต้องการข้อมูลหรือหากคุณมีปัญหาใด ๆ โปรดไปที่เว็บไซต์ของ Philips ที่ [www.philips.com/water](http://www.philips.com/water) หรือติดต่อศูนย์ดูแลผู้บริโภคในประเทศของคุณ หากไม่มีศูนย์ดูแลผู้บริโภคในประเทศของคุณให้ไปที่ตัวแทนจำหน่ายในพื้นที่.

ค้นหารายละเอียดการรับประกันเพิ่มเติมที่ [www.philips.com/water](http://www.philips.com/water)

## **ข้อจำกัดความรับผิดชอบ**

AquaShield และหน่วยงานในเครือและ บริษัท ที่เกี่ยวข้องจะไม่รับผิดชอบต่อความเสียหายใด ๆ ที่เกิดขึ้นจากหรือเนื่องจากการใช้ขวด GoZero™ Smart เพื่อวัตถุประสงค์อื่นใดนอกเหนือจากที่ตั้งใจไว้อย่างชัดเจนหรือสำหรับความผิดปกติใด ๆ อันเป็นผลมาจากความล้มเหลวของ ผู้ใช้ปฏิบัติตามข้อมูลการใช้งานและความปลอดภัยในคู่มือนี้อย่างเคร่งครัด.

## การกำจัด

ฝาขวด GoZero™ Smart มีแบตเตอรี่ลิเทียมโพลีเมอร์แบบชาร์จไฟได้ ดังนั้นจึงควรจัดการกับผลิตภัณฑ์ที่สอดคล้องกับกฎหมายท้องถิ่นและกฎระเบียบ สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการประมวลผลกรุณาติดต่อเจ้าหน้าที่ท้องถิ่นของเมืองหรือเทศบาล

การถอดแบตเตอรี่แบบชาร์จไฟได้ก่อนกำจัดทิ้ง (สำหรับผู้ใช้อยู่ตามสหภาพยุโรป)  
ตรวจสอบให้แน่ใจว่าแบตเตอรี่หมดเกลี้ยงเมื่อคุณถอดออก.

1. ถอดขั้วลิโคเนครอบ. (A-1)
2. แกะฝาพลาสติกด้านบนออก. (A-2)
3. แกะ PCB หลวม. (A-3)
4. ดึงสายไฟออกจาก PCB. (A-4)
5. ถอดแบตเตอรี่ออก อย่าเจาะแบตเตอรี่. (A-5)



A-1



A-2



A-3



A-4



A-5



ก่อนที่จะนำวัสดุผลิตภัณฑ์รวมกับขยะในครัวเรือน คุณควรส่งมอบให้กับศูนย์รีไซเคิลที่รัฐบาลกำหนด การทำเช่นนี้จะช่วยรักษาสีสิ่งแวดล้อม

โปรดเก็บคู่มือผู้ใช้ไว้เพื่อใช้อ้างอิงในอนาคต







Thanks for choosing Philips GoZero™ bottles, and helping to reduce single-use plastic waste.

Learn more about the Philips GoZero™ range on [www.philips.com/water](http://www.philips.com/water).

Specifications are subject to change without notice

© 2020 AquaShield

All rights reserved.

The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.

This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

Rev B OCT 20

