




Philips  
On tap water purifier

Pure Taste

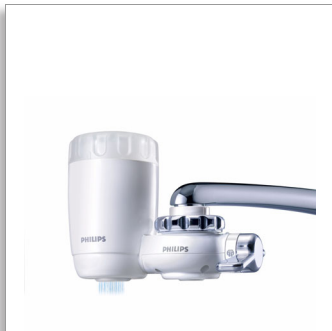

WP3861

## Better-tasting water made easy

with Pure Taste filter

Compact and easy to install water purifier that improves the taste of your drinking and cooking water by removing chlorine and other impurities with silver coated active carbon filter.

### Better-tasting water

- Pure Taste filter for cleaner and better tasting water

### Made easy

- Pure Protect alert informs you when to change the filter
- Hi-flow with maximum rate of 2 liters per minute

### Simplicity

- Quick Fit tap adapters for easy installation on your tap
- Advanced Quick Twist mechanism for easy filter replacement

# PHILIPS

# Specifications

## General specifications

- Accessories: 8 QuickFit tap-mounting adapters, PureProtect Alert
- Replacement filter cartridge: WP3961
- Water selection: filtered spray, unfiltered spray, unfiltered stream
- Water flow rate: 2 l/min
- Water flow rate: 5 °C

## Design specifications

- Color(s): white
- Product weight: 260 g
- Product dimensions (L x W x H): 65 x 143 x 106 mm
- Materials: plastic

## Purification system

- Chlorine removal: >75 %
- Turbidity removal: 3000 liters or approx. 1 year

## Filter specifications

- Filter lifetime: 2000 L or approx. 6 months
- Major filter components: silver-coated GAC

## Water input conditions

- Min. input water pressure: 0.7 bar
- Max. input water pressure: 3.5 bar
- Max. input water temperature: 50 °C

## Country of origin

- Replacement filter: Japan
- Water purifier: Japan

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

# Highlights

## Pure Taste filter

The Pure Taste filter removes unpleasant chlorine, bad tastes and smells, as well as large sediment from your tap water, ensuring purer and better tasting water for drinking, cooking and cleaning fruits and vegetables. In addition, the silver-coated active carbon prevents bacteria growth inside the filter, giving you extra safety for your water.

## Pure Protect alert

Pure Protect alert is a sticker with the months of the year you can adhere easily to the filter cap. By marking the month of replacement, you can be sure you remember to replace your filter on time, ensuring you endless Pure Taste water.

## Hi-flow

This compact water purifier has a maximum flow rate of 2 liters per minute, which makes little change to the normal flow rate of unfiltered water. By simply rotating the water selection lever, you also have a choice of either a stream or a spray of unfiltered water or spray of filtered water.

## Quick Fit tap adapters

This advanced water purifier comes with a number of tailor-made Quick Fit tap adapters, to help you having an easy and simple installation of your purifier in your tap. Real sense and simplicity.

## Quick Twist filter change

The advanced Quick Twist filter change mechanism makes changing the filter quick, easy and secure, bringing sense and simplicity to your water purifier.

